


# Classroom Select® Height Adjustable Tilt-N-Nest Computer Table

## ASSEMBLY INSTRUCTIONS

Thank you for purchasing the Classroom Select® Height Adjustable Tilt-N-Nest Computer Table from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or [customer care.schoolspecialty.com/contact-us-email](mailto:customer care.schoolspecialty.com/contact-us-email).

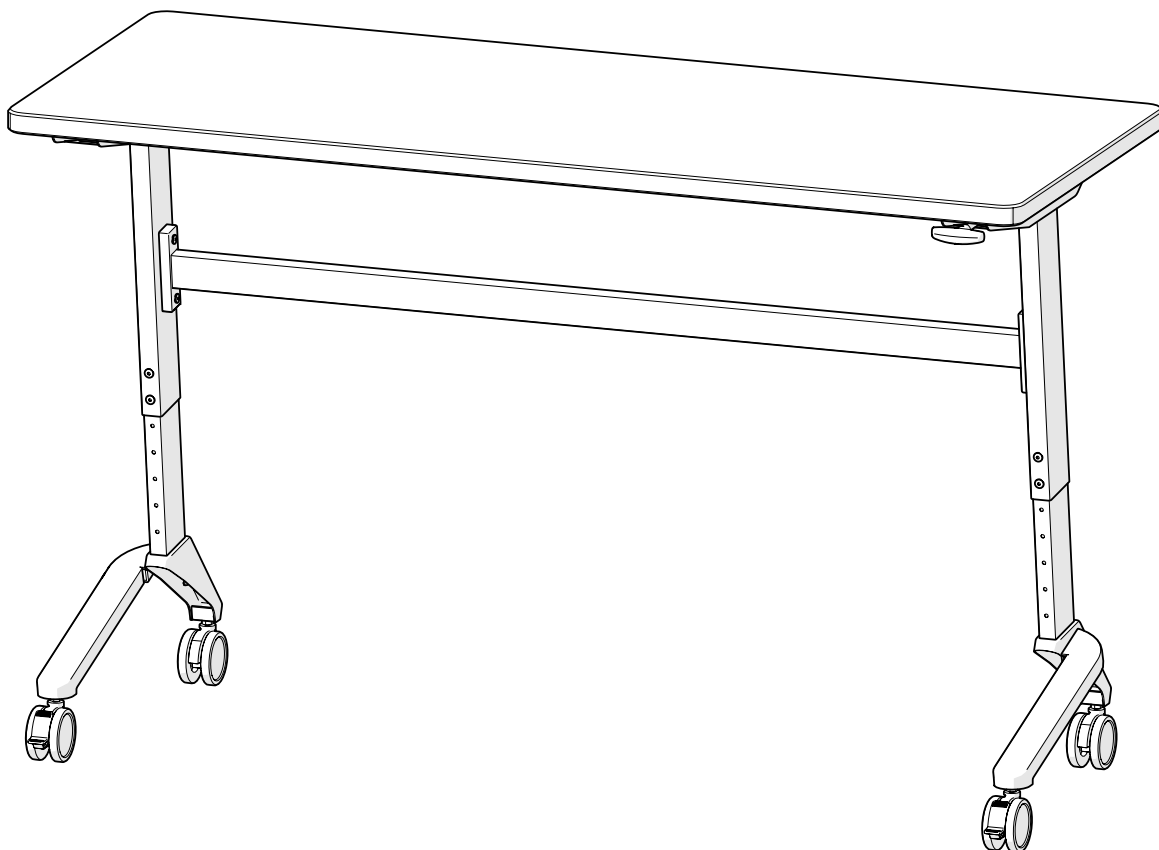

## PART AND TOOL LIST

---



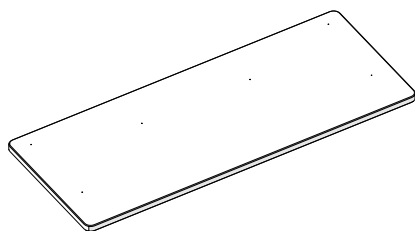



Table Top  
Quantity: 1

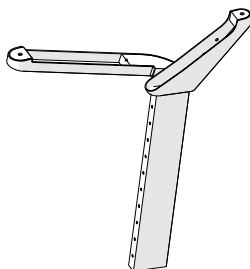


Right Leg Insert  
Quantity: 1

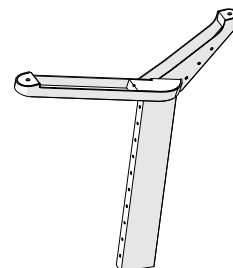


Left Leg Insert  
Quantity: 1

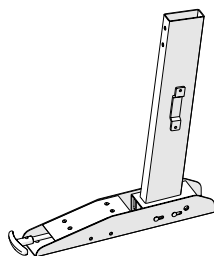


Right Leg Receiver  
Quantity: 1

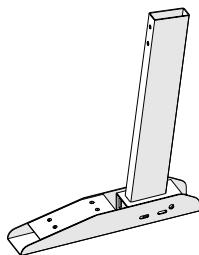


Left Leg Receiver  
Quantity: 1

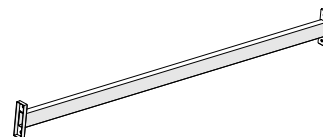


Crossbar  
Quantity: 2

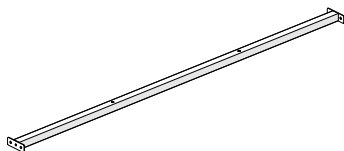

Top Support  
Quantity: 1

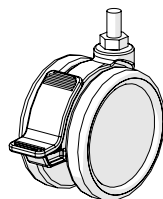


Locking Caster  
Quantity: 2

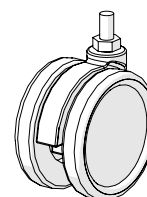


Non-Locking Caster  
Quantity: 2

## PART AND TOOL LIST

---

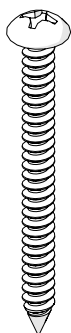


#10 x 2" Wood Screw  
Quantity: 2

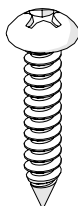


#10 x 1" Wood Screw  
Quantity: 4




M6 x 12mm  
Quantity: 4

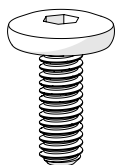

M6 x 15mm  
Quantity: 4

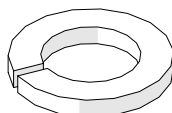


Lock Washer  
Quantity: 4

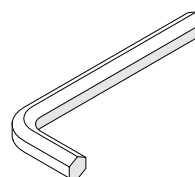

Allen Wrench  
Quantity: 1


## STEP 1

Join Crossbar and Top Support to both Leg Receivers. Use 15mm screws for Crossbar and 12mm screws for Top Support. Secure screws with allen wrench provided.

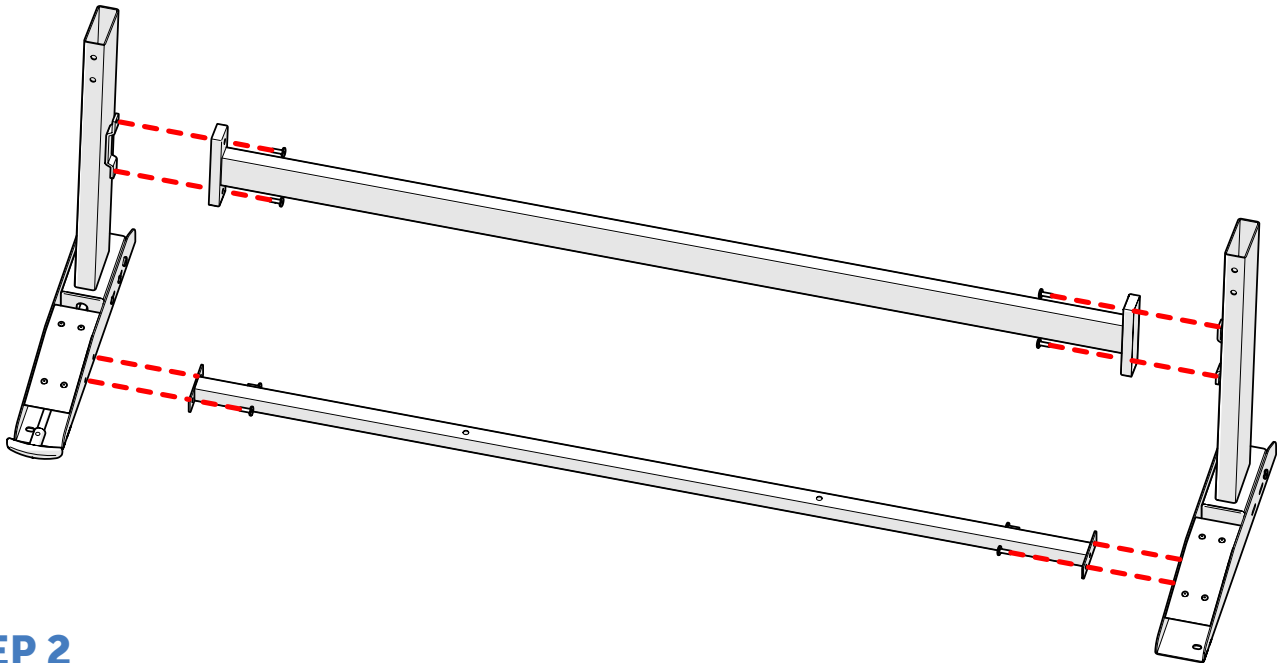


## STEP 2

Place the top upside down on a stable, non-abrasive soft surface to avoid any scratching. Set base on underside of top. Secure with two 1" wood screws per receiver and two 2" wood screws through crossbar.

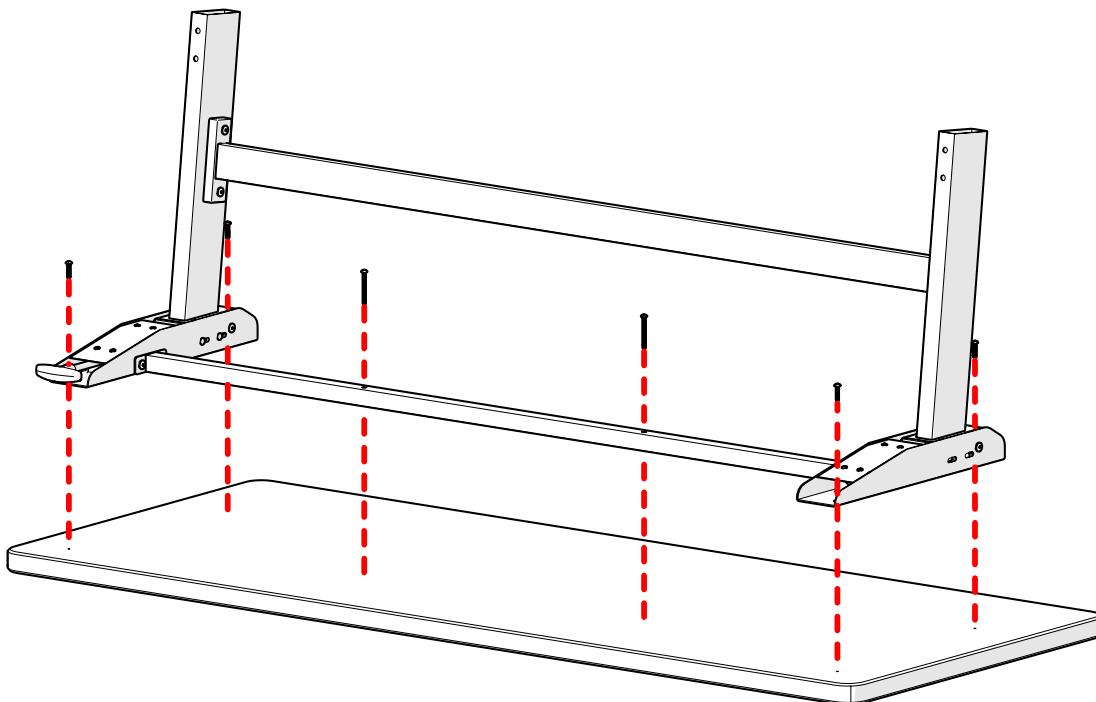


## STEP 3

Slide left and right Leg Inserts into receivers. At desired height insert two 15mm screws per leg and tighten.

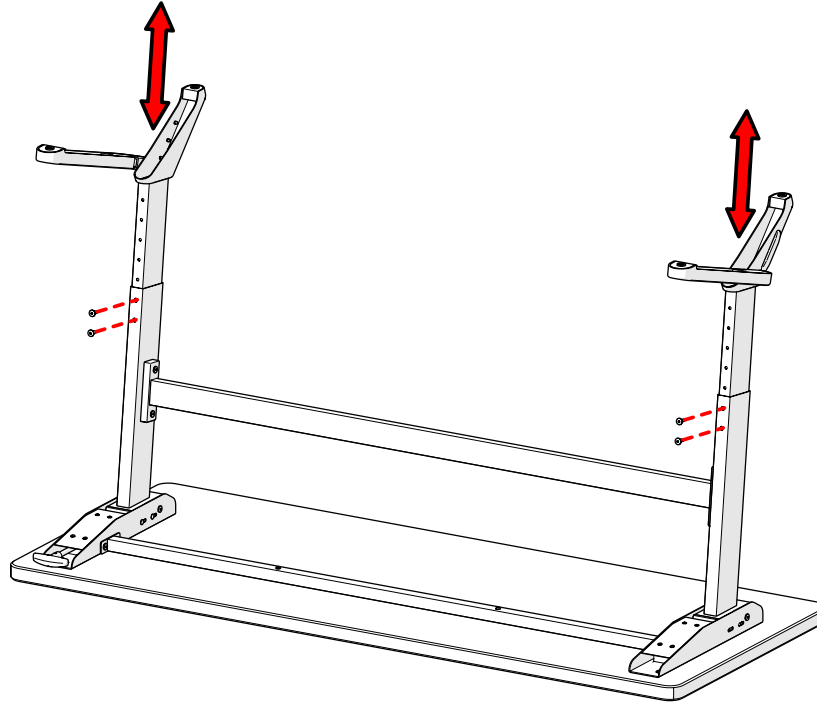



## STEP 4

Screw casters with Lock Washers into legs. Place Locking Casters in front and Non-locking Casters in back. With another person, carefully flip table upright.

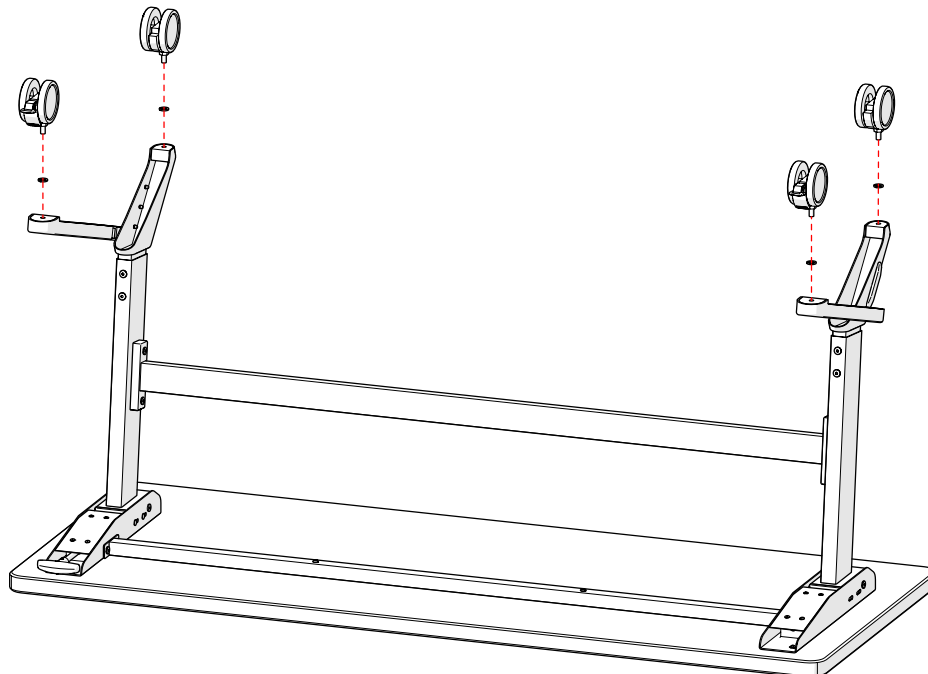

## STEP 5

To flip top, pull T-handle straight out. When lock disengages pick up on front edge of top to rotate up. Release handle to lock in flipped up position. To lower top, pull handle and gently lower until lock engages in level position.

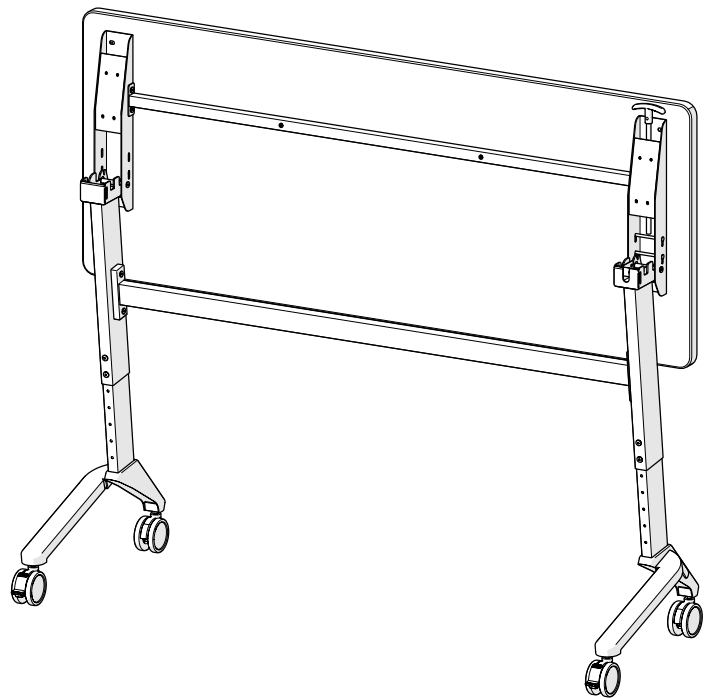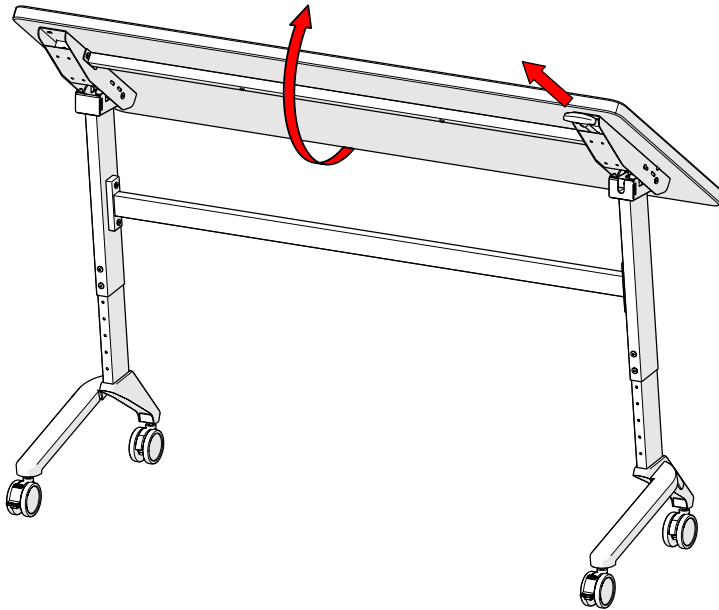

## DISCLAIMERS

---

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or [customer care.schoolspecialty.com/contact-us-email](mailto:customer care.schoolspecialty.com/contact-us-email).

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

**Product Warranty:** [help.schoolspecialty.com/s/article/Product-Warranties](https://help.schoolspecialty.com/s/article/Product-Warranties)