

SNOEZELLEN® MOBILE CARTS

Item#'s 2138977, 2138979, 2138976, 2138983, 2138980, 2138981, 2138982, and 2138984

INSTALLATION INSTRUCTIONS



Important Note:

Snoezelen® Carts come in seven different configurations. Your cart may differ slightly from the images or instructions provided. Please inspect all components for damage and verify all parts are included before beginning installation.

UNPACK & PREPARE.....	3
INSTALL THE BUBBLE TUBE WATER/WATERLESS	3
INSTALL THE FIBER OPTICS	3
INSTALL THE PROJECTOR.....	4
ACCESSORY STORAGE	4
FILL THE BUBBLE TUBE.....	4
POWER ON & ENJOY.....	4

UNPACK & PREPARE

1. Carefully unpackage all components.
2. Review the individual instruction sheets included with each component.
3. Lay out all pieces in an open area so they are easy to access during assembly. Be careful not to mix-up the power sources.

INSTALL THE BUBBLE TUBE WATER/WATERLESS

1. Assemble the bubble tube according to its included instructions.
2. Remove the white cover from the bubble tube base and discard it.
3. On the front side of the cart (the side with the mirrors), remove the four bolts on the side wood panel with the hole in it.
4. Slide the wood panel with the circular cutout over the top of the bubble tube.
5. Angle the tube into the top opening of the cart, carefully lowering the chassis and tube into place.
6. Once seated properly, slide the wood panel down and reinstall the front wood panel. Reinstall the four screws to secure the panel in place.

INSTALL THE FIBER OPTICS

1. Insert the fiber optics bundle through the grommet hole located in the large mirror panel at the back of the cart.
2. Feed the bundle behind the mirror and into the interior cabinet.
3. Install the interior shelf so that it sits just below the grommet hole.
4. Attach the light engine to the fiber optics bundle and tighten the set screw.
5. Plug the power supplies for both the light engine and the bubble tube into the power strip located in the lower compartment of the cart.

INSTALL THE PROJECTOR

If you have an Optikinetics Solar 100 or Solar 250 projector:

You may mount the projector:

- On the top of the cabinet, or
- On the back of the cabinet

This is based on your preference.

To secure the projector, use:

- 1 ½" ³⁄₈" carriage bolt
- 2 x Flat Washers
- 1 x Lock washer
- 1 x ³⁄₈" Wing nut

(Hardware not included.)

ACCESSORY STORAGE

Any additional accessories included with your cart can be stored safely inside the rear cabinet compartment.

FILL THE BUBBLE TUBE

- Your 70-inch bubble tube requires approximately 9 gallons (31L) of distilled water.
- Your 40-inch bubble tube requires approximately 5 gallons (19L) of distilled water
- Fill slowly from the top to avoid spills.
- Fill up to 3-4" below the top. Avoid overfilling as this can cause dripping when moving from room to room.

POWER ON & ENJOY

1. Double-check all wiring and ensure all components are plugged into the internal power strip.
2. Turn on the main power.
3. Power each component as needed.
4. Allow the bubble tube to finish filling and begin operation.
5. Enjoy your fully assembled Snoezelen® Cart!