 



Classroom Select® Community Table

ASSEMBLY INSTRUCTIONS


Thank you for purchasing the Classroom Select® Community Table from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.

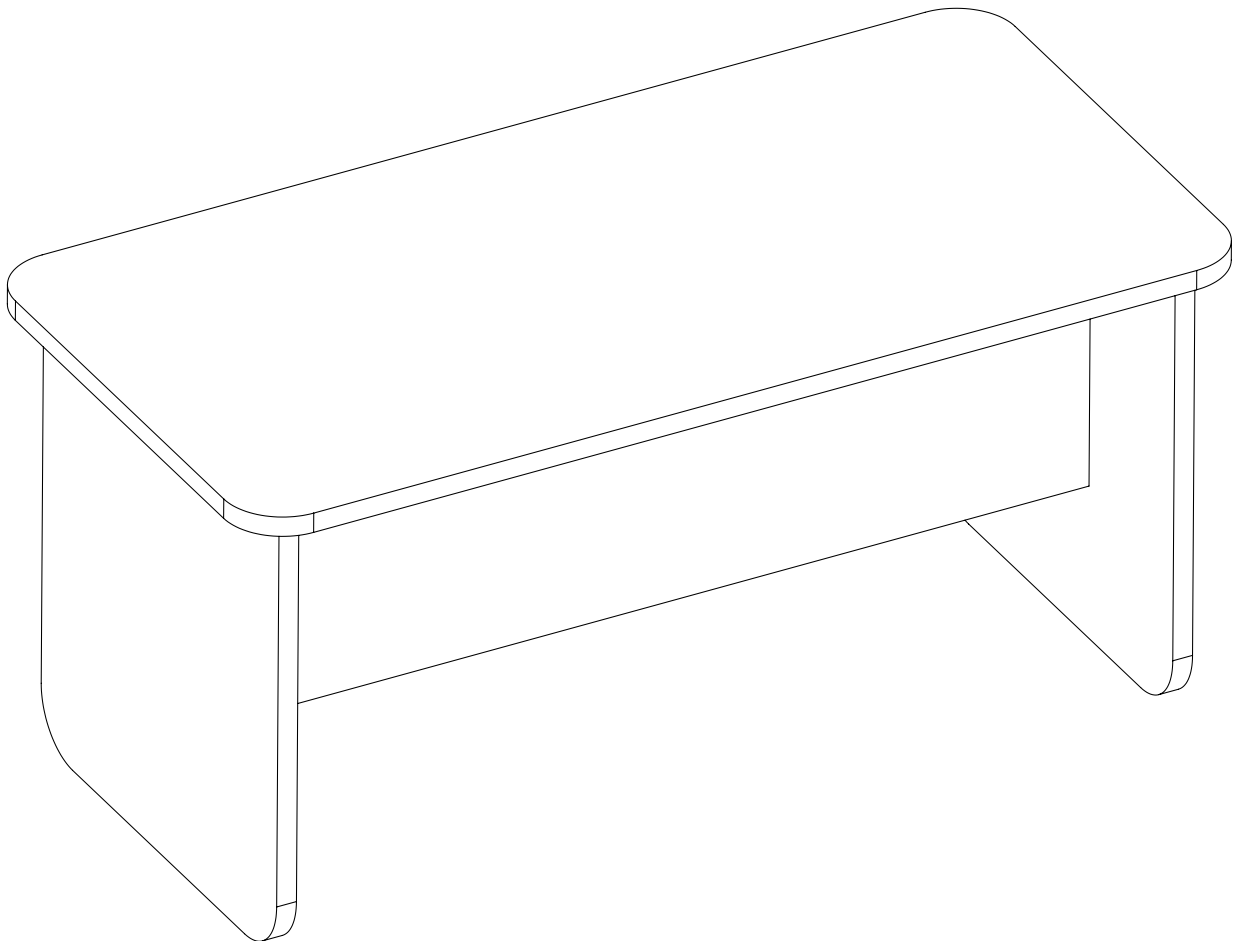

 
PART AND TOOL LIST

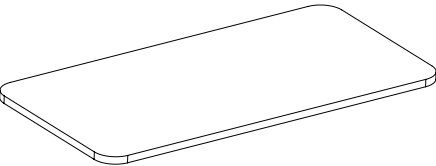


Top Panel
Quantity: 1

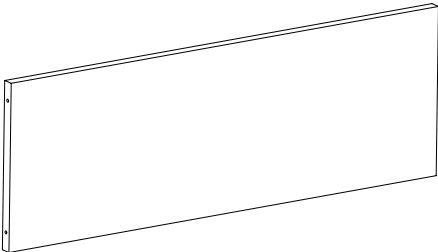 


Modesty Panel
Quantity: 2

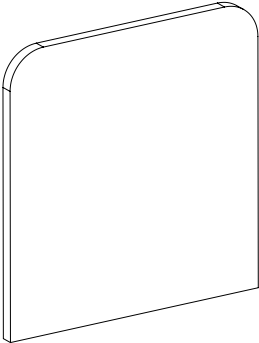 

End Panel
Quantity: 2

 

Cam Bolt
Quantity: 16

 


Cam Insert
Quantity: 16



Dowel Insert
Quantity: 16


STEP 1

 Install cam bolt hardware into both side panels. For each panel, Dowel Inserts are inserted into the four central holes, followed by the Cam Bolts threading into the dowel inserts. Cam Inserts are inserted into the four holes along the top edge of the side panel with the small arrows pointing toward the panel edge.

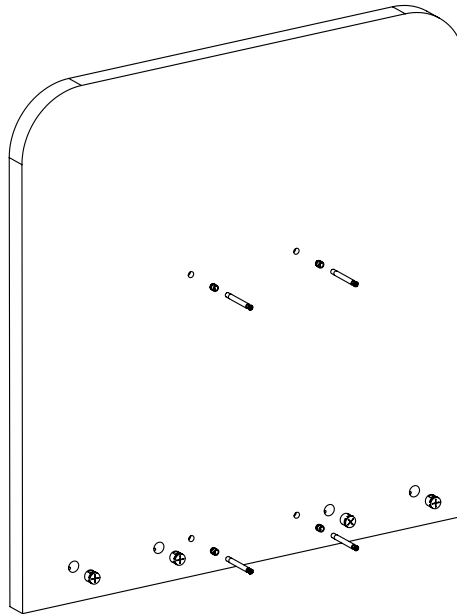


STEP 2

 Insert Cam Inserts into the four holes on each of the Modesty Panels with the small arrows pointing toward the panel edge.

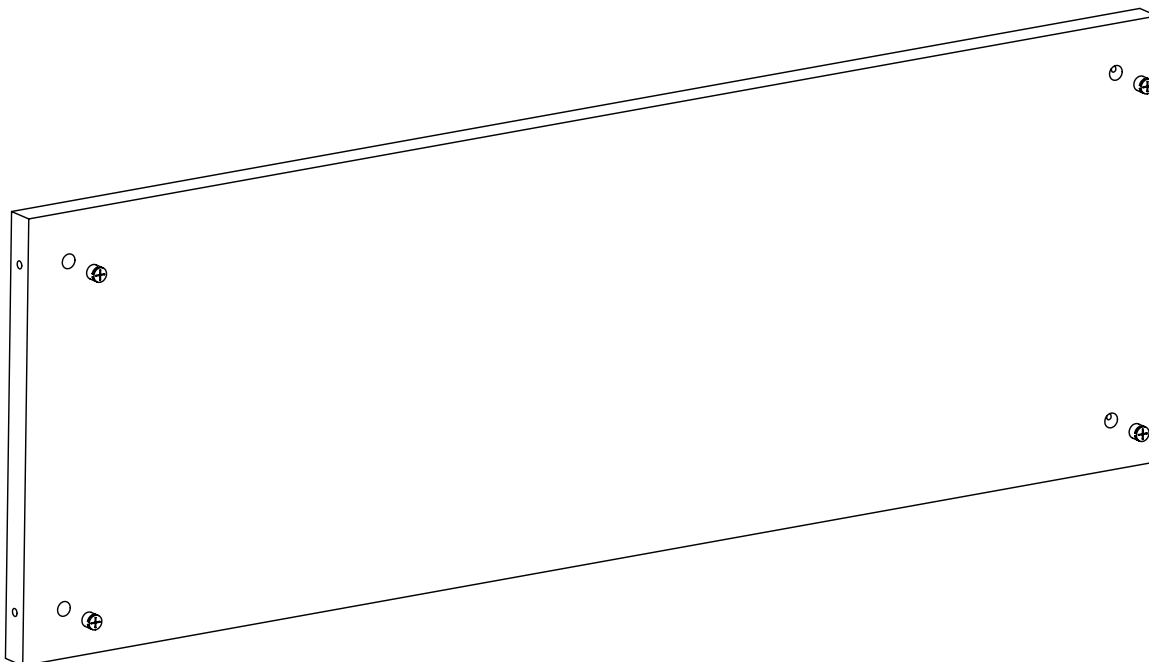


STEP 3

 Slide Modesty Panel onto Cam Bolts on one of the Side Panels and tighten Cam Inserts. Repeat this process for the second Modesty Panel. ***NOTE* - Hardware to face inwards.**

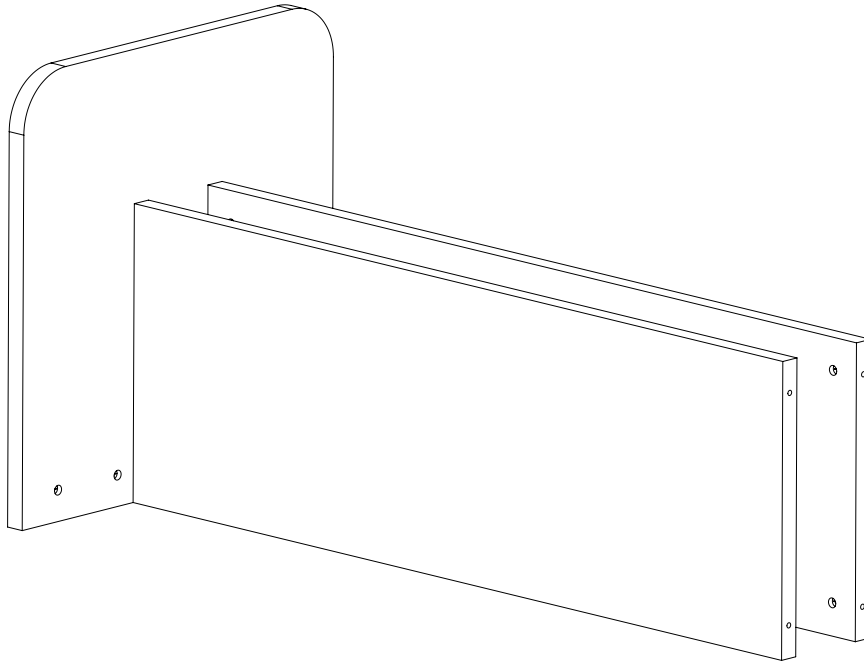


STEP 4

 Slide second End Panel into opposite end of Modesty Panels and tighten Cam Inserts.

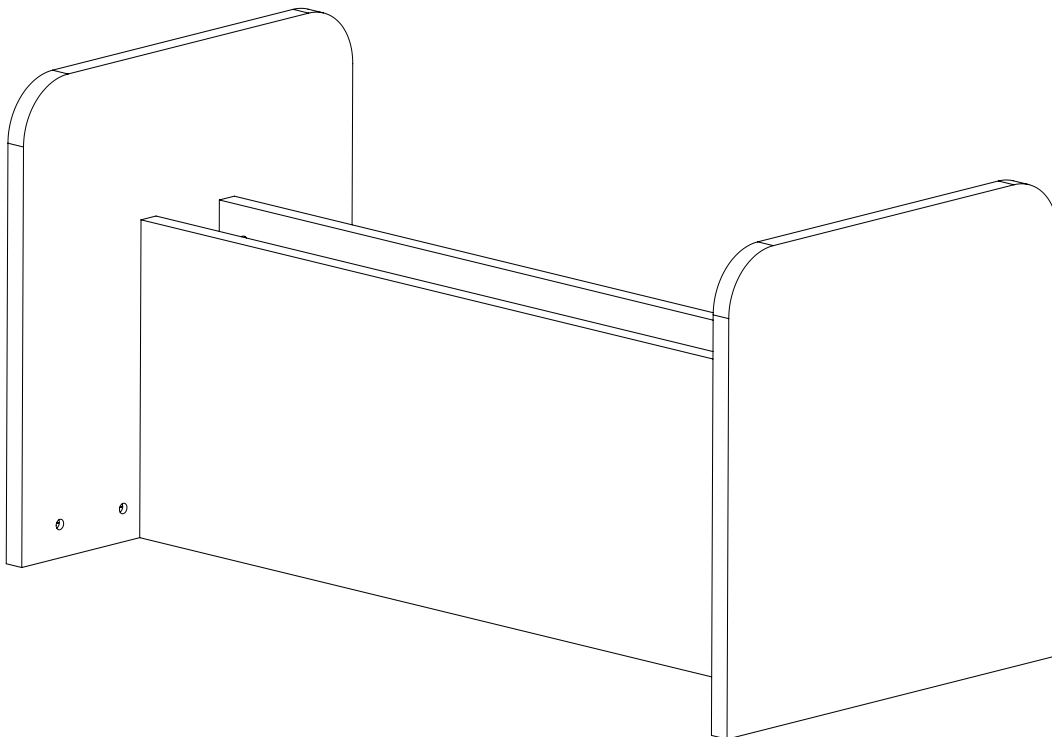


STEP 5

 Place the top upside down on a stable, non-abrasive soft surface to avoid any scratching. Install Dowel Inserts and Cam Bolts into underside of Top Panel. Dowel Inserts are inserted into each hole, followed by the Cam Bolts threading into the Dowel Inserts.

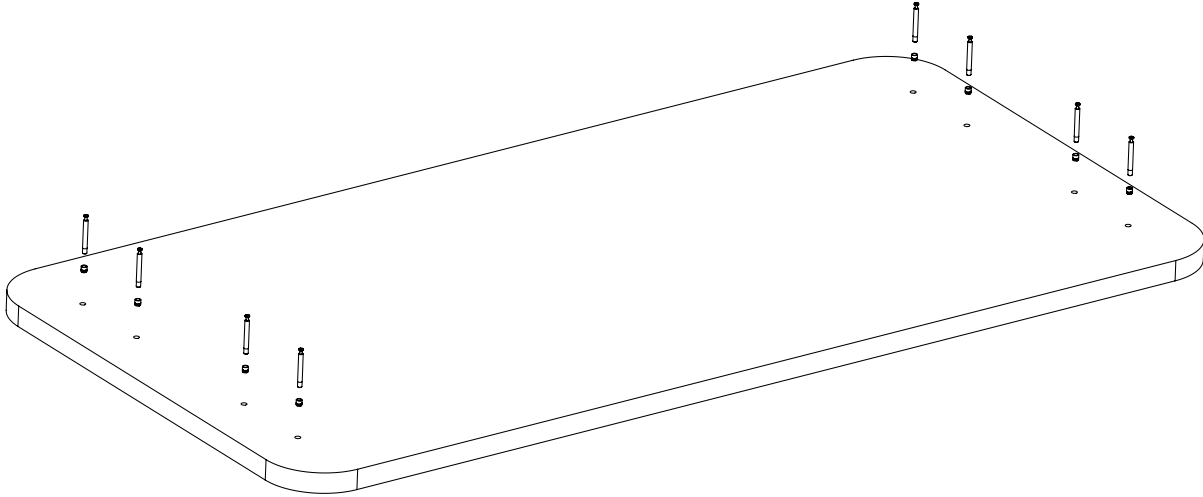


STEP 6

 Flip base assembly over and lower the Top Panel onto the base assembly. Tighten all Cam Inserts once the Top Panel is fully aligned and seated.

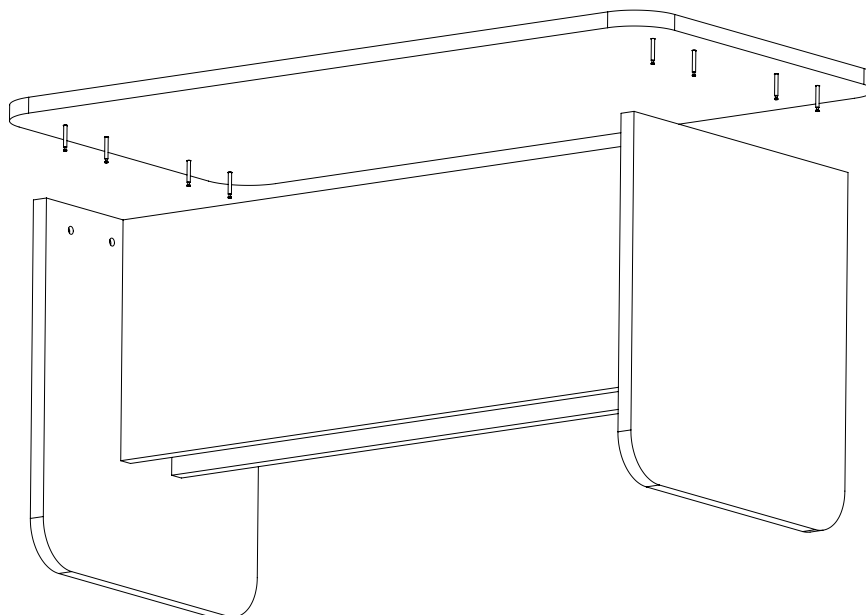


STEP 7

 Tighten all Cam Inserts once the Top Panel is fully aligned and seated, ensuring that all Cam Inserts have proper engagement.

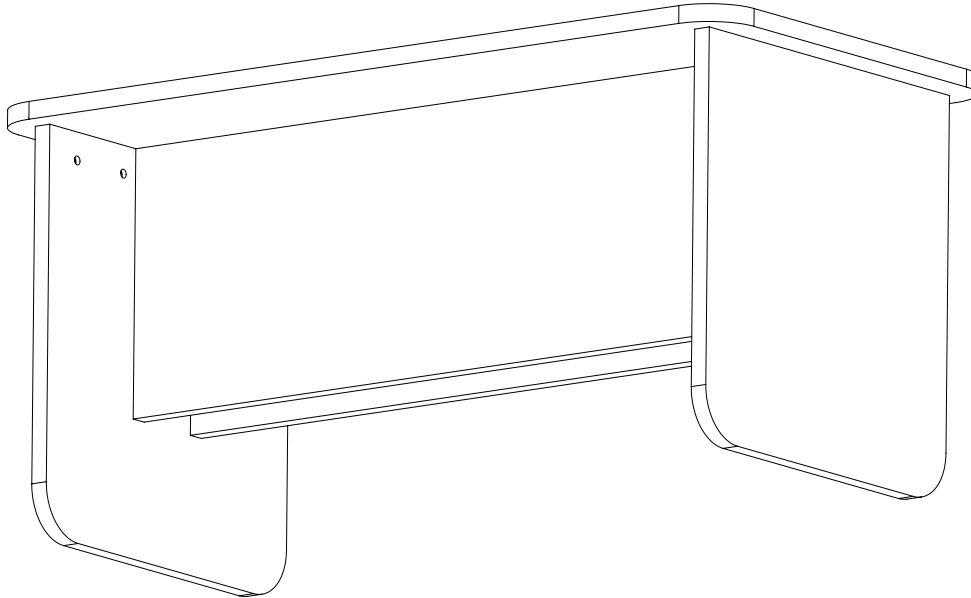

STEP 8

 Assembly is Complete.

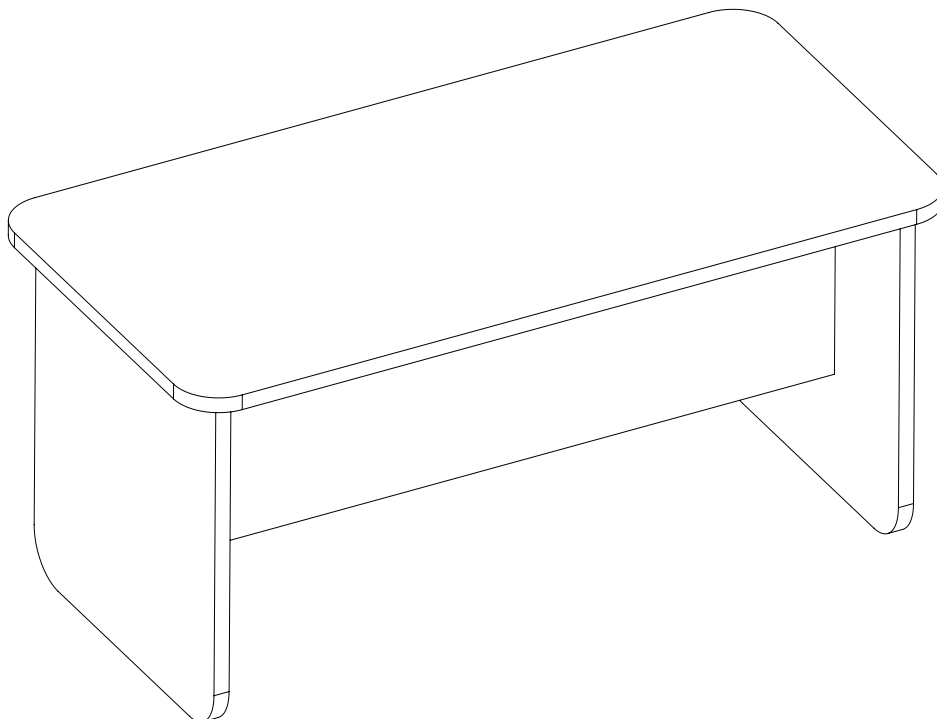

DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties