 



Classroom Select® TV Cart - Media Cart/Wall

ASSEMBLY INSTRUCTIONS


Thank you for purchasing the Classroom Select® TV Cart - Media Cart/Wall from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.

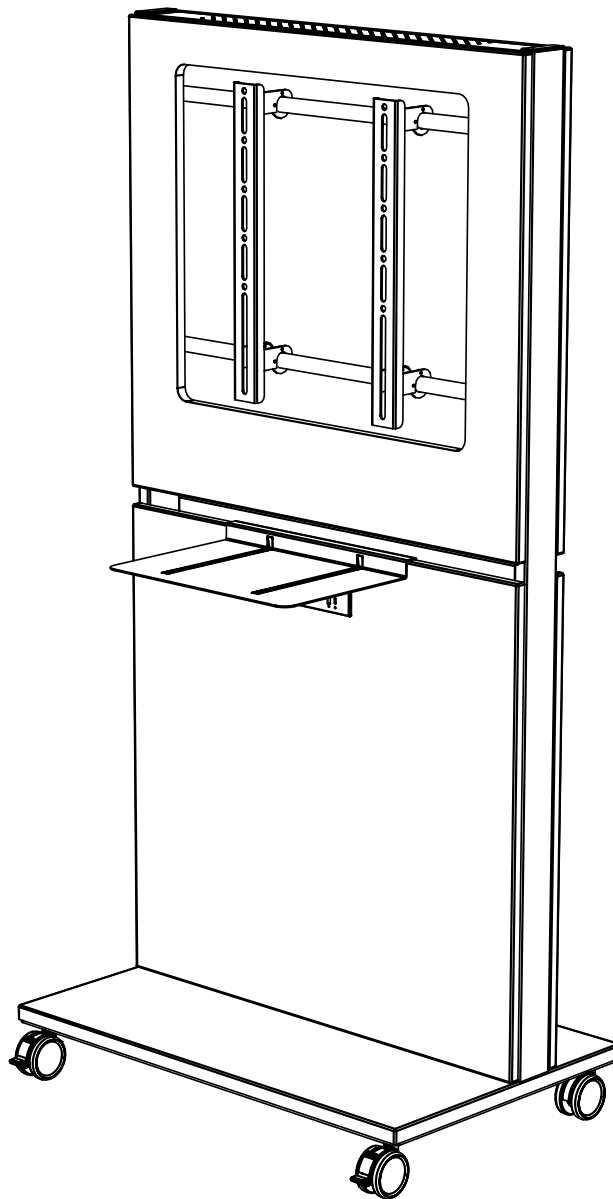

 
PART AND TOOL LIST

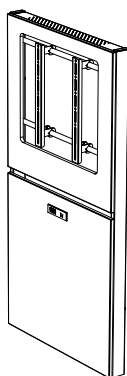


Body
Quantity: 1

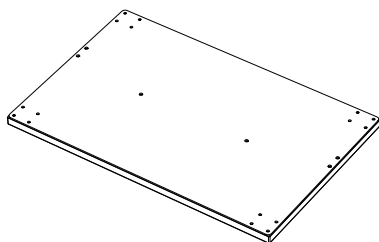 


Base
Quantity: 1

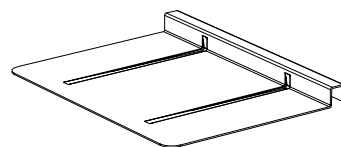 


Shelf
Quantity: 1

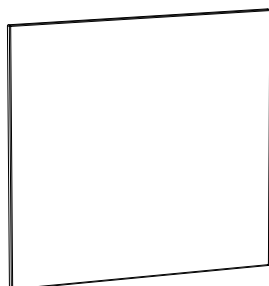 


Back Panel (Top)
Quantity: 1

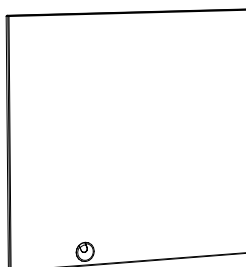 

Back Panel (Bottom)
Quantity: 1

 


M6 x 20mm
Quantity: 16

 

M6 x 12mm
Quantity: 2




 M8 x 50mm
Quantity: 4

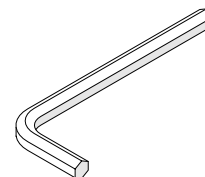


Allen Wrench
Quantity: 2

 PART AND TOOL LIST

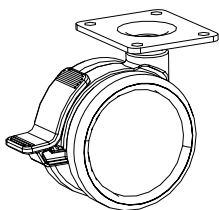


Locking Caster
Quantity: 2

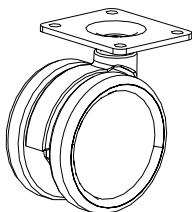 

Non-Locking Caster
Quantity: 2


STEP 1

 Align casters with holes on the bottom plate and secure using sixteen M6 x 20mm screws. Place locking casters on front side of plate.

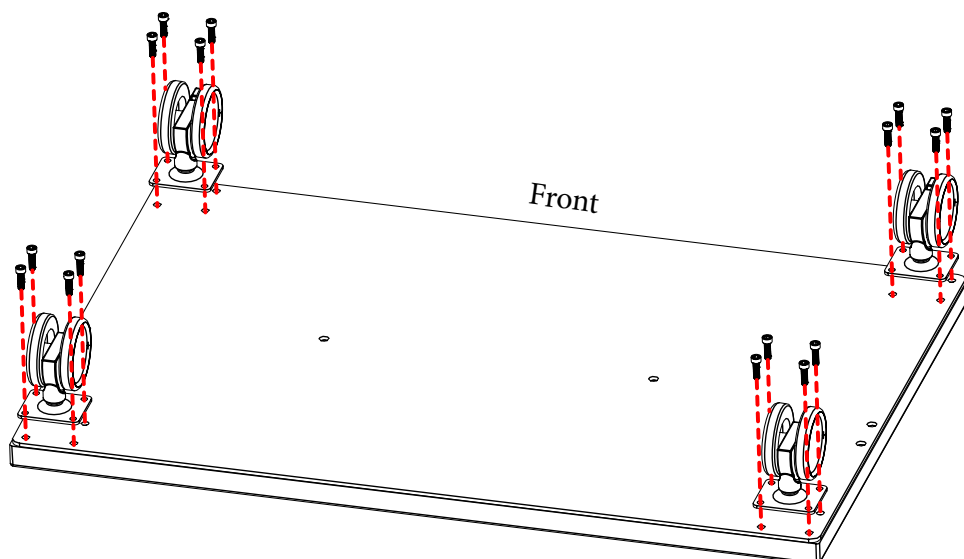



STEP 2

 Position body on bottom plate and line up the holes. Secure bottom plate to body using four M8 x 50mm screws.

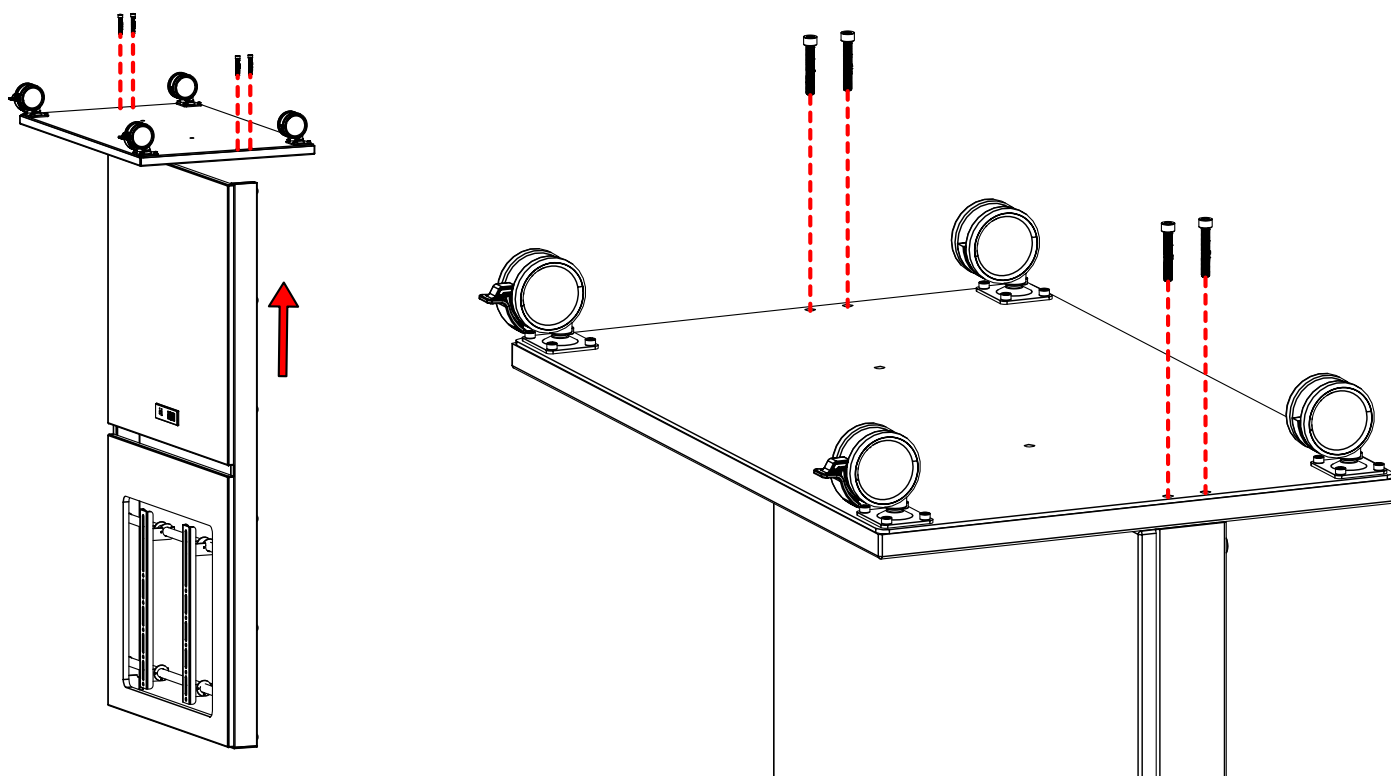



STEP 3

  Add shelf to body between top and bottom panels and secure to the body on the back side using two M6 x 12mm screws.

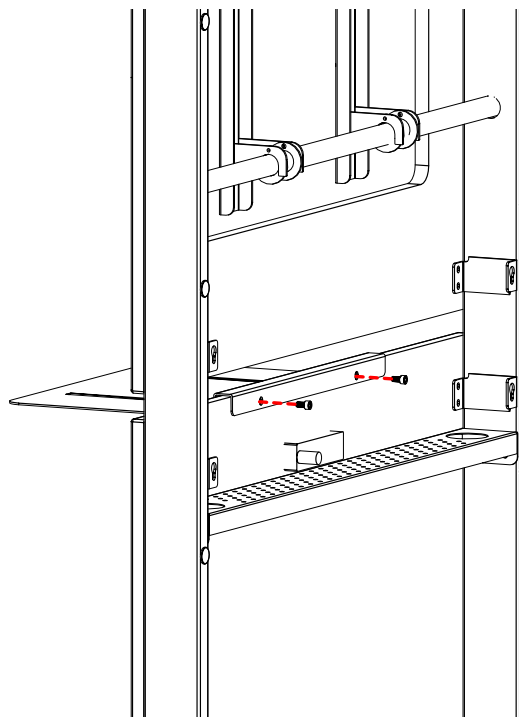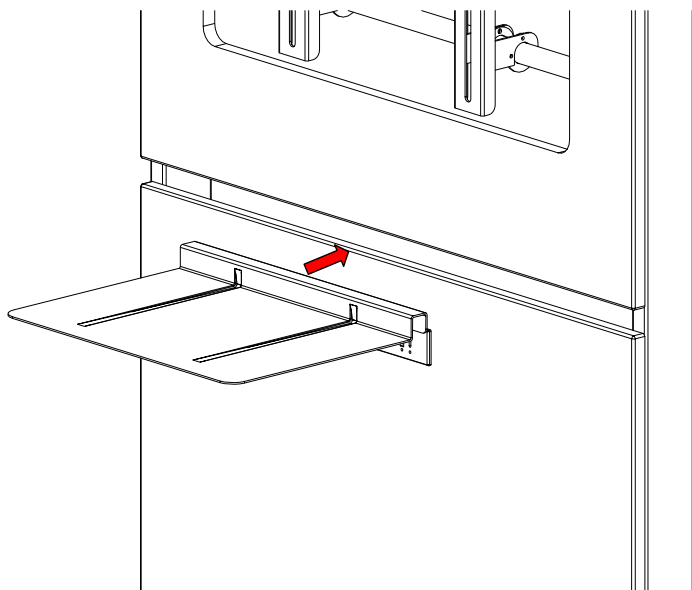

STEP 4

  Take both back panels (top and bottom) and secure onto the body by inserting the panel studs onto the inside body brackets. Place grommet in bottom back panel.

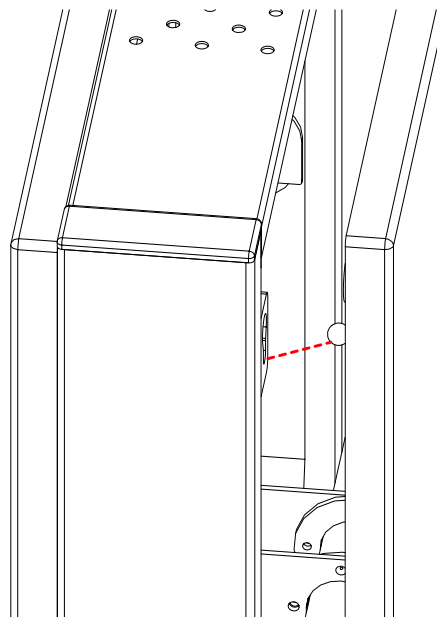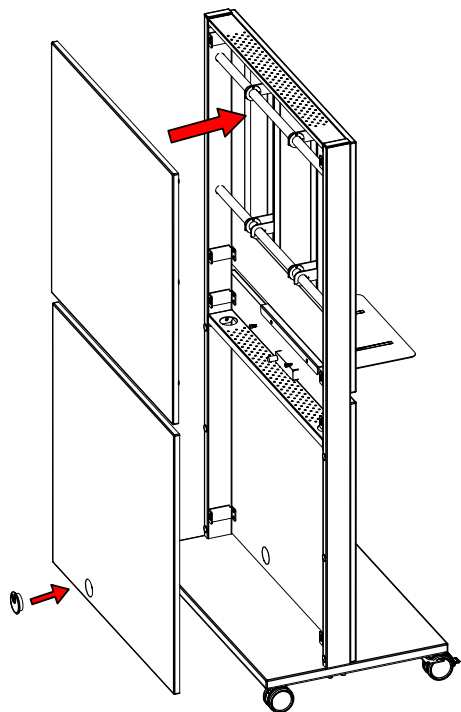

DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties