


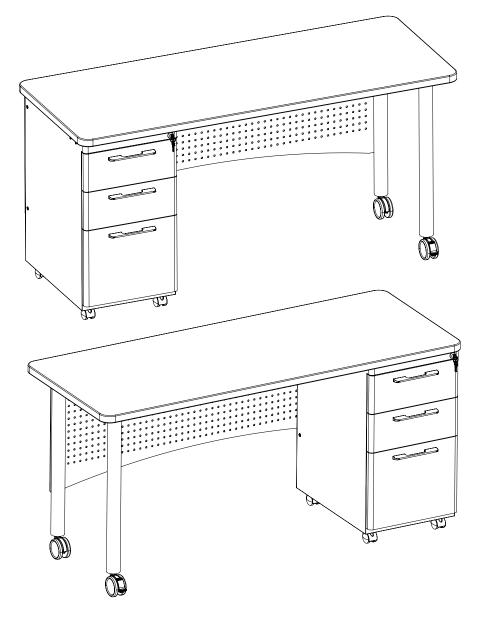

Classroom Select[®] NeoClass[®] Left/Right Pedestal Teacher's Desk

ASSEMBLY INSTRUCTIONS

 
Thank you for purchasing Classroom Select[®] NeoClass[®] Left/Right Pedestal Teacher's Desk from School Specialty[®]. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.








PART AND TOOL LIST



Large Top Quantity: 1

 

Modesty Panel Quantity: 1



Pedestal Box Quantity: 1







Divider Panel Quantity: 1 Handle Quantity: 3

Pencil Tray Quantity: 1



Divider Bar Quantity: 1 Key Set Quantity: 1

 


Locking/Non-Locking Ped Casters Quantity: 2 Pairs





PART AND TOOL LIST



Leg Quantity: 2



Locking/Non-Locking Leg Casters Quantity: 1 Pair



#10x1" Wood Screw Quantity: 22





#12x1" Wood Screw Quantity: 5

M4x12mm Tap Caster Screw Quantity: 4



Lock Washer Quantity: 2



Plastic Side Cap Quantity: 8




Plastic Back Cap (Not Used) Quantity: 6

Allen Wrench and Caster Wrench Quantity: 1 set





Open drawers and remove handle screws. Swap handles to front of drawers and insert handle screws from inside of shelves to secure handles in place.

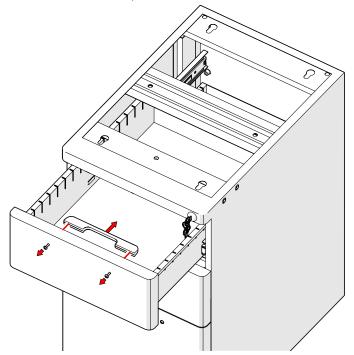

STEP 2


Remove drawers by first extending drawer to furthest setting until catch engages. To slide drawer off of rails, rotate visible catch levers on both sides of drawer either up or down while gently pulling drawer. Once both sides are free, drawer can be removed.

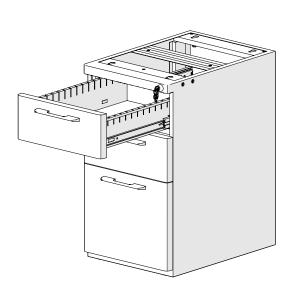

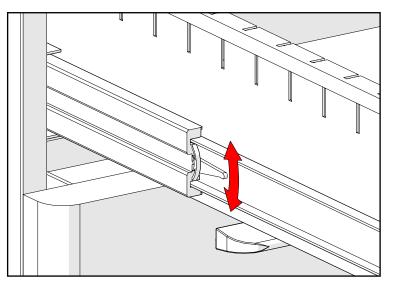




Place the top upside down on a stable, non-abrasive soft surface to avoid any scratching. Set pedestal (with drawers removed) upside down on top. Secure to top with #12x1" wood screws inserted through holes in pedestal top brackets.

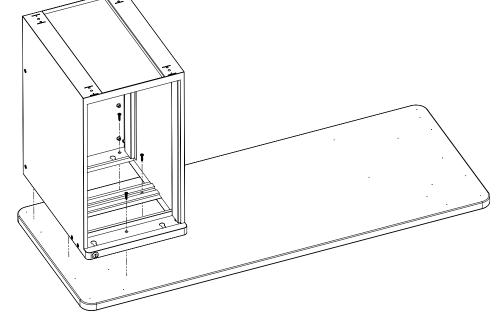


STEP 4

Align Legs with pre-drilled holes and secure to Top with #10x1" Wood Screws, making sure to use eight screws per leg - not all locations are pre-drilled.

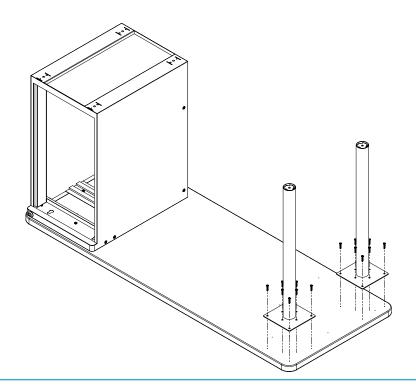




Align Modesty Panel flush to back of pedestal with the tab facing out, centered on the top. Secure to top using #10x1" wood screws through all available tab holes.

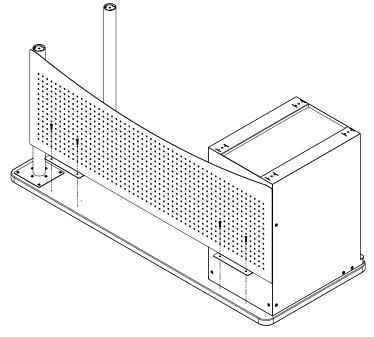


STEP 6

Install Casters to bottom of pedestal. Use Locking Casters in front of pedestal and Non-Locking Casters in the back. Secure casters with metal tap screws.

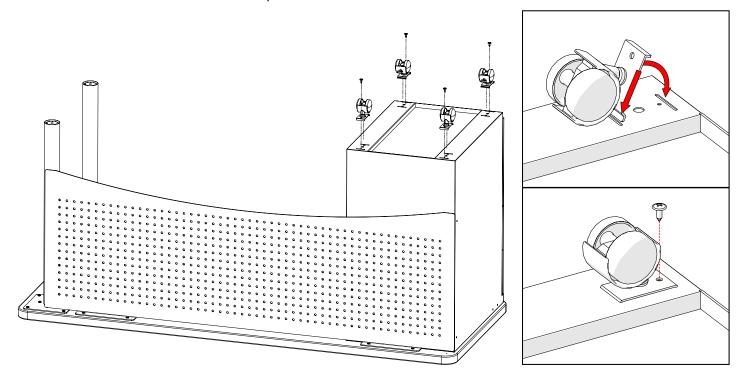


STEP 8

Install Casters to bottom of legs, making sure to include the split-lock washer. Use Locking Caster on front leg and Non-Locking Casters on the back. Secure casters with provided caster wrench.

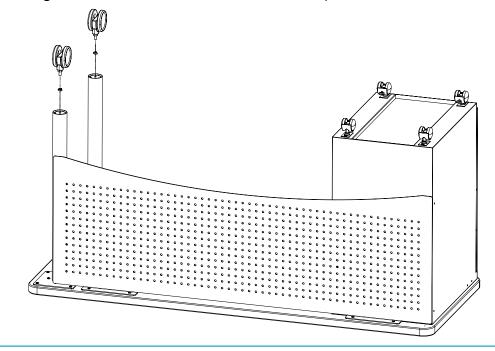


Insert Plastic Caps into holes on both sides of the pedestal. Additional holes are present on the hidden side of the pedestal in the view below

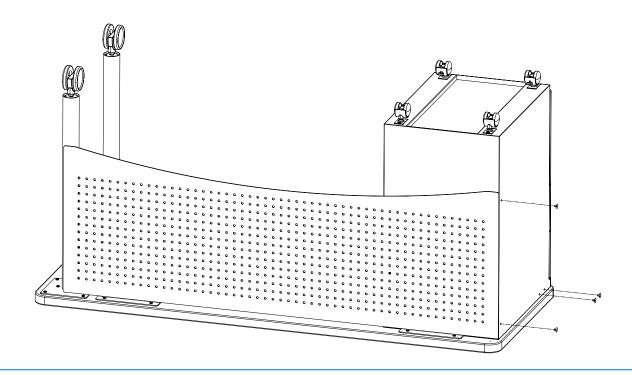



Return unit to an upright position, insert drawers back into pedestal boxes, and place accessories as desired within drawers.

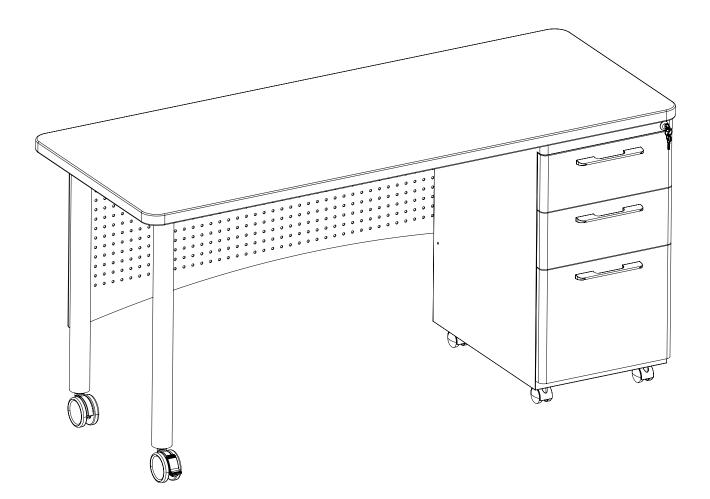



DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties