


Classroom Select® Activity Tables

ASSEMBLY INSTRUCTIONS

Thank you for purchasing Classroom Select® Activity Tables from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.

Disclaimer: These instructions are shown with Apollo® Legs, but work for Standard, Apollo®, and NeoClass® legs offered by School Specialty®.

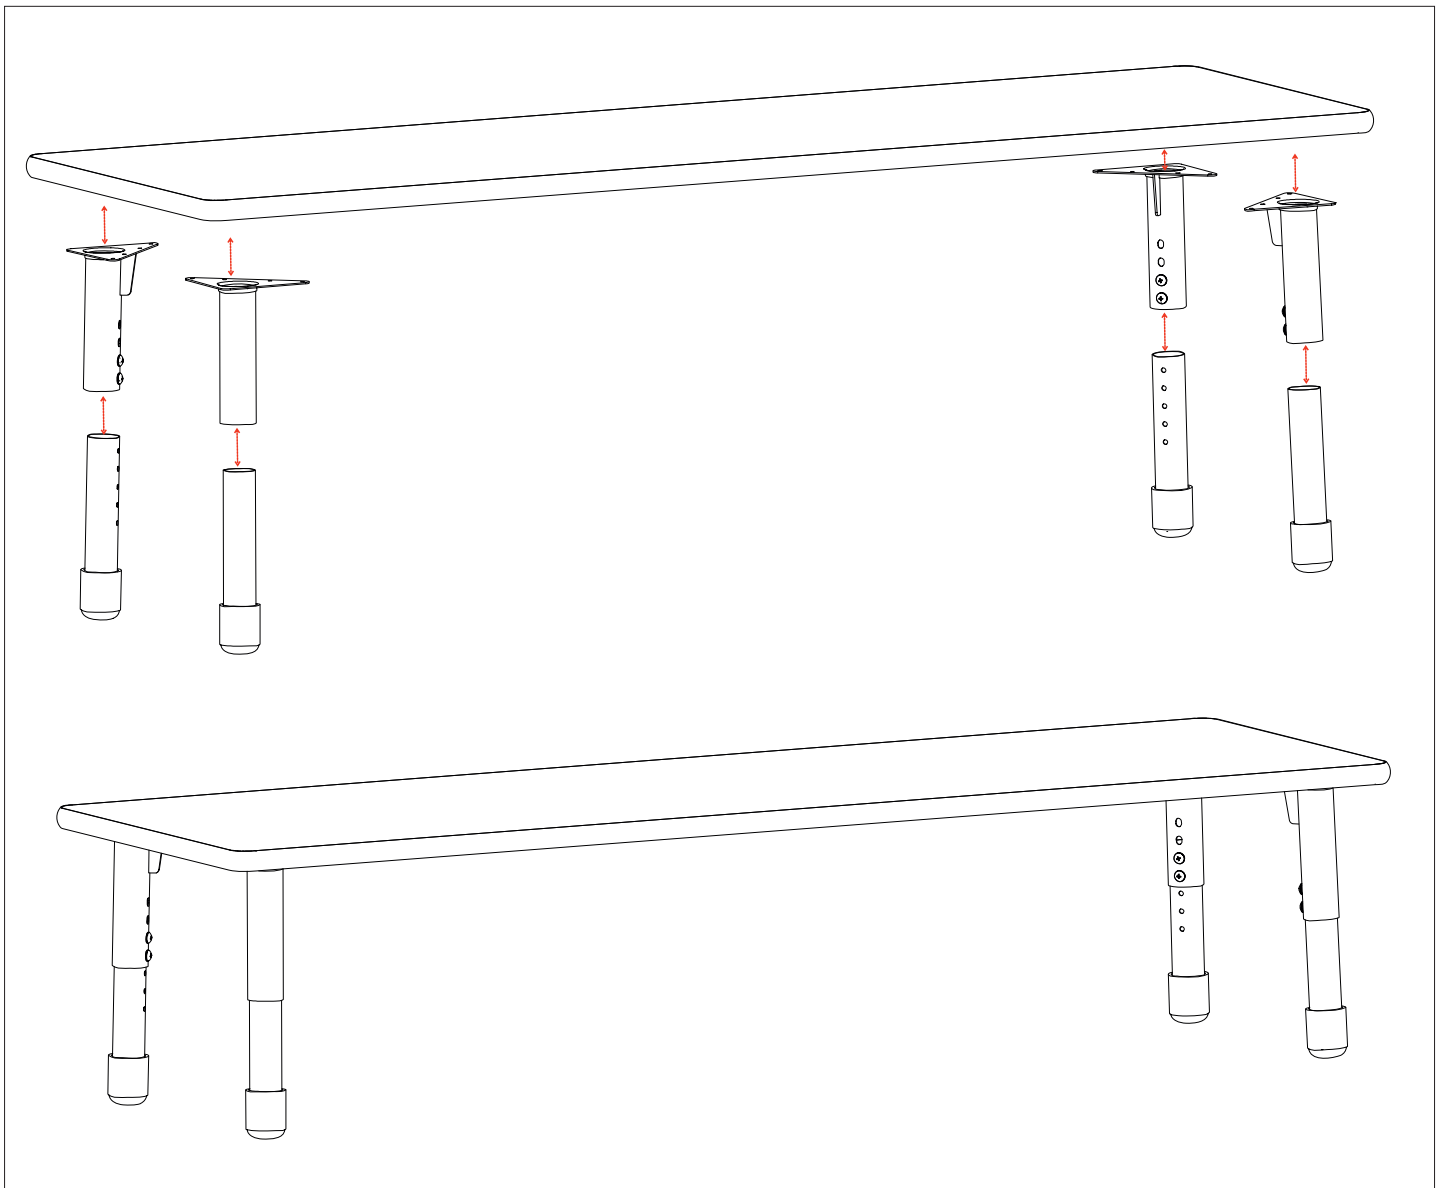

PART AND TOOLS LIST



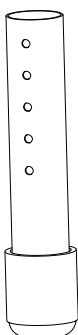

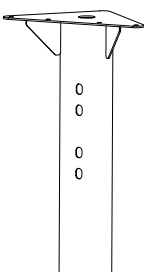
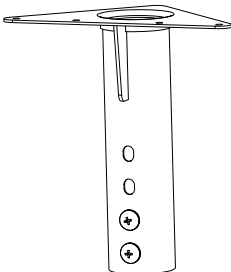
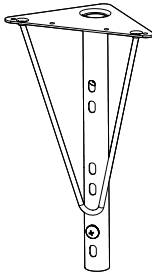


Table Top
Quantity: 1




Standard Apollo® NeoClass®

Activity Table Leg Insert
Quantity: 4 (6 on Centric, 84" and 96" Wide Rectangle)

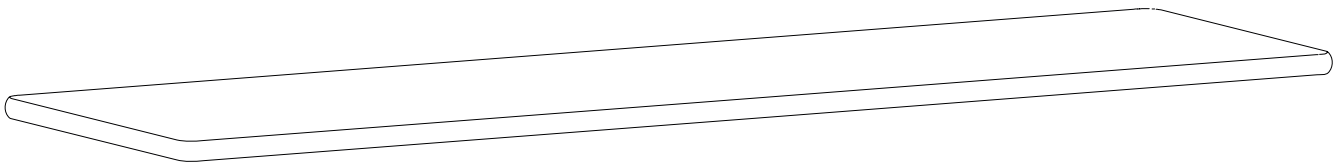


Standard Apollo® NeoClass®

Activity Table Leg Upper
Quantity: 4 (6 on Centric, 84" and 96" Wide Rectangle)

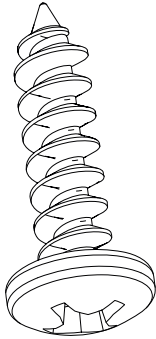


Phillips Rounded Head Screw
Quantity: 16 (24 on Centric, 84" and 96" Wide)

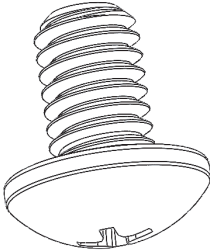

Serrated Screw
Quantity: 8 (12 on Centric, 84" and 96" Wide)


STEP 1

To begin assembling the Activity Tables, place the table upside down on a stable, non-abrasive soft surface to avoid any scratching. Slide the upper metal plate of the Leg into the V-Bracket (shown in zoomed in image 1). For a snug fit, gently tap it with a rubber mallet. Using a Phillips screwdriver, secure the leg mounting plate to the table with four Round Head Screws from the hardware kit (shown in zoomed in image 2). Repeat for the remaining Legs and V-Brackets.

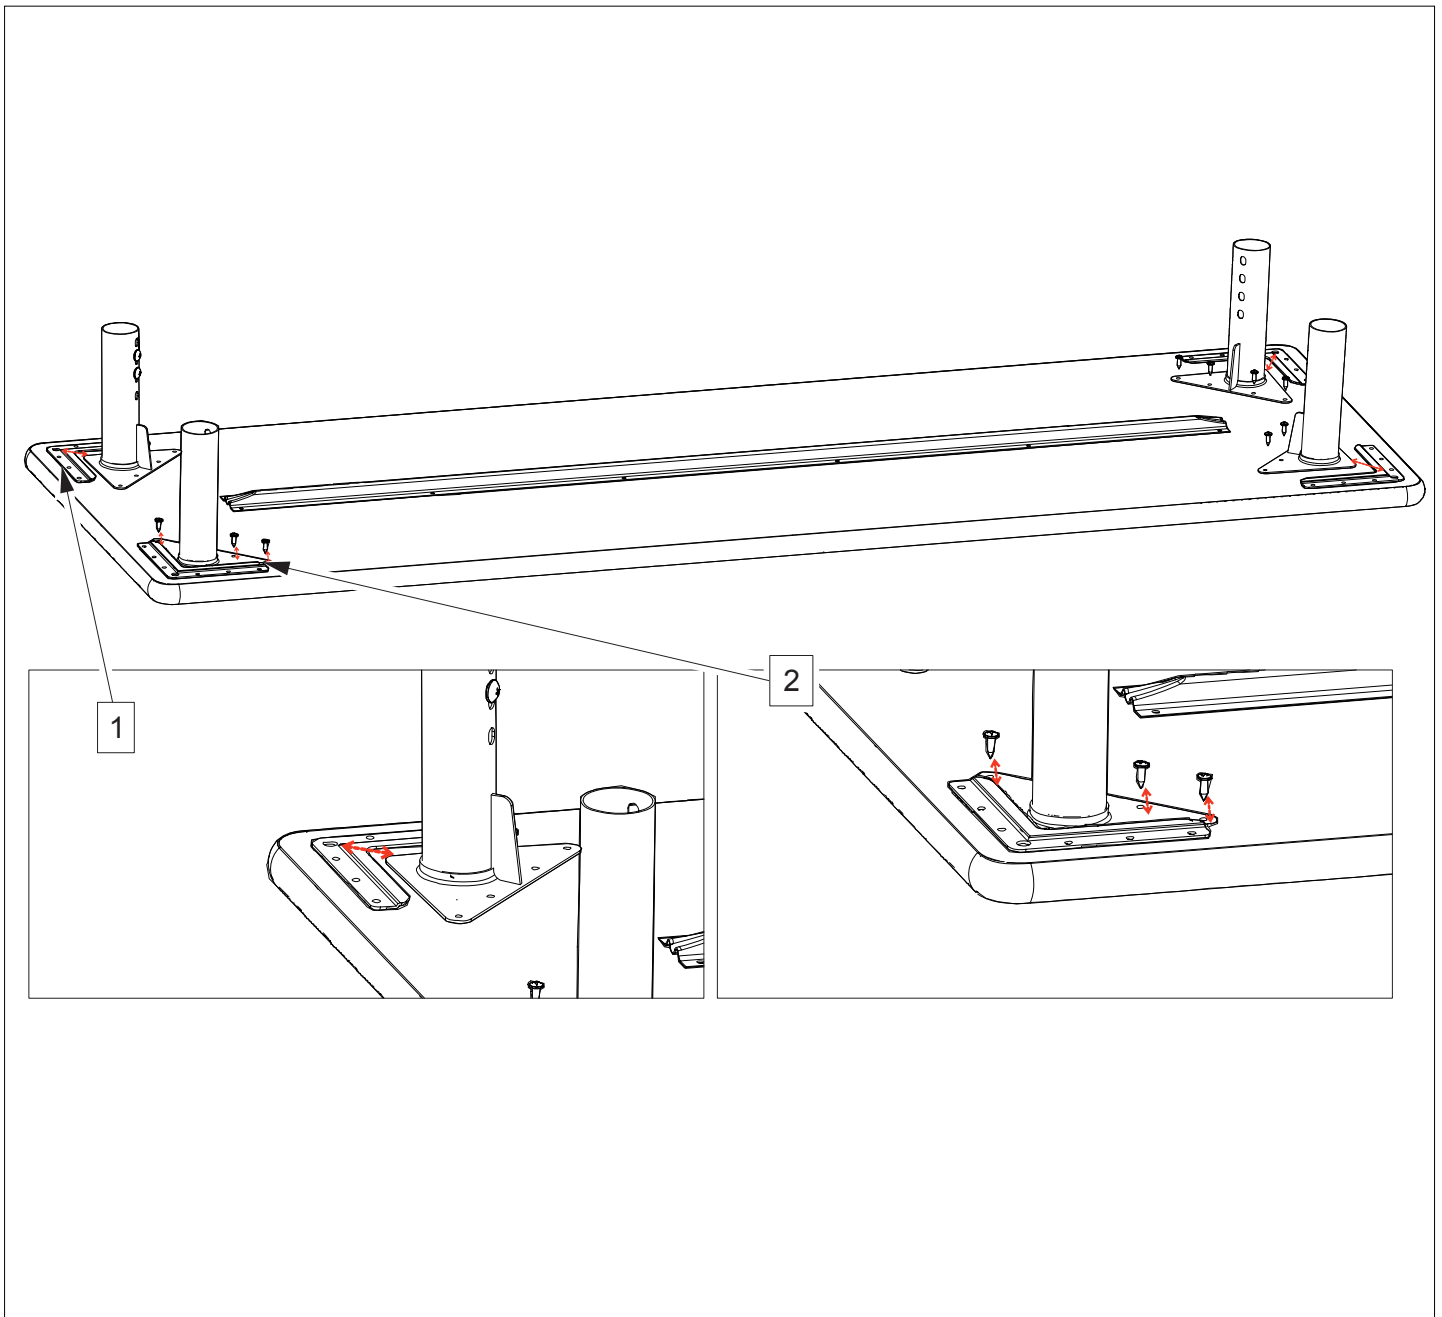

STEP 2

Insert the adjustable Leg Inserts into the Leg Uppers. Align the holes on both parts to ensure proper positioning. Secure each Leg Insert by inserting the provided serrated screws through the aligned holes and fastening them, as shown in the zoomed-in diagram. After setting the desired leg height, leave each screw $\frac{1}{4}$ turn loose. Carefully flip the Activity Table upright and check that it sits level. You may need a helper at this point. Once level, tighten the screws with an additional $\frac{1}{4}$ turn to eliminate any wobble. Ensure all screws are securely tightened to maintain table stability and prevent movement.

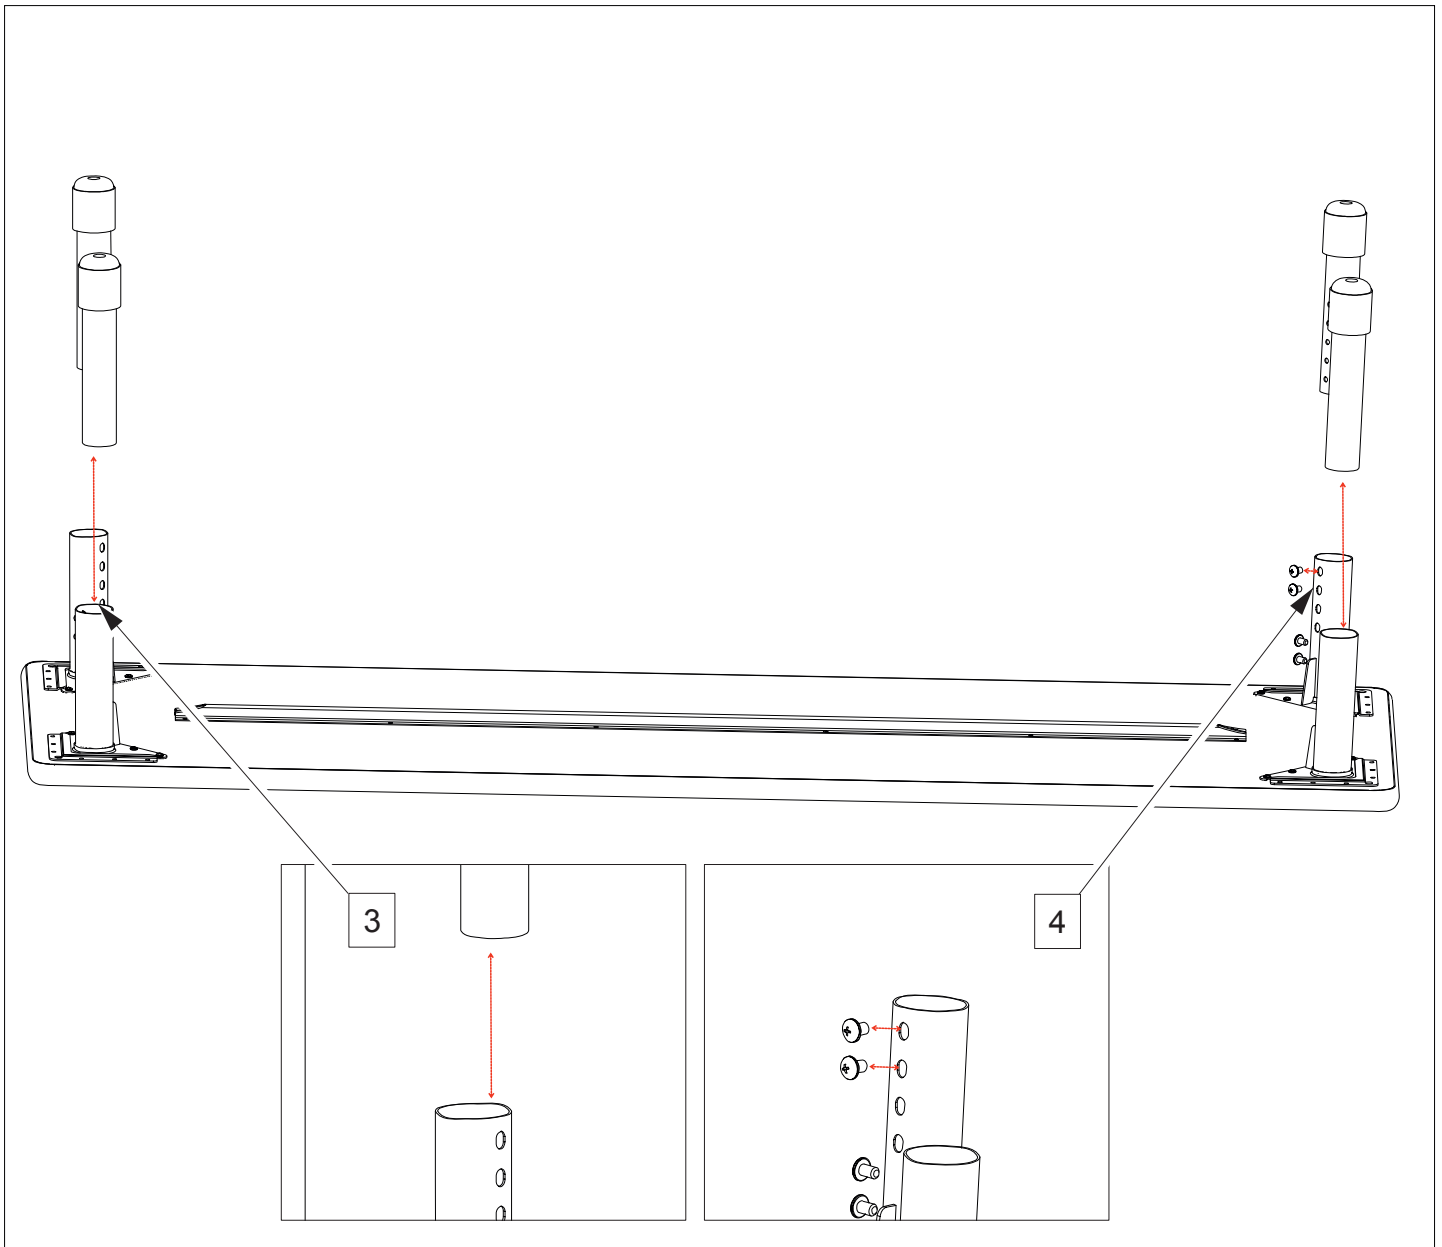

DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties