


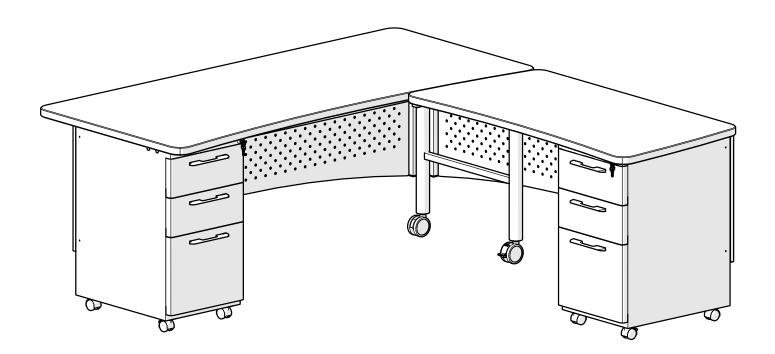

# Classroom Select<sup>®</sup> NeoClass<sup>®</sup> Double Pedestal Right or Left Return Teacher's Desk


#### **ASSEMBLY INSTRUCTIONS**

Thank you for purchasing Classroom Select® NeoClass® Double Pedestal Right or Left Return Teacher's Desk from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.







# **PART AND TOOL LIST**

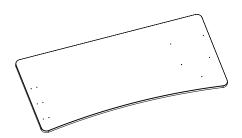


Large Top Quantity: 1

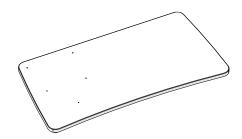


**Small Top** Quantity: 1

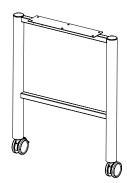

Leg Set Quantity: 1

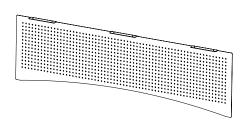

**Modesty Panel** Quantity: 2

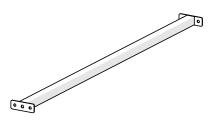

**Short Crossbar** Quantity: 1



Long Crossbar Quantity: 1



**Pedestal** Quantity: 2



Ped. Panel Screw (M6 x12mm) Quantity: 8



**Ped Wood Screw**  $(#12 \times 1")$ Quantity: 10



# **PART AND TOOL LIST**











Leg Wood Screw Quantity: 16 Panel Wood Screw Quantity: 12

**Pedestal Casters** Quantity: 8

 
Leg Casters Quantity: 2




Lock Washer Quantity: 2



Plastic Side Cap Quantity: 16




**U-Clamp** Quantity: 4

 

Ganger Quantity: 1



 
Ped. Caster Screw Quantity: 8



Included tools: Caster Wrench & Allen Wrench





Open shelves and remove handle screws. Swap handles to front of shelves and insert handle screws from inside of shelves to secure handles in place.

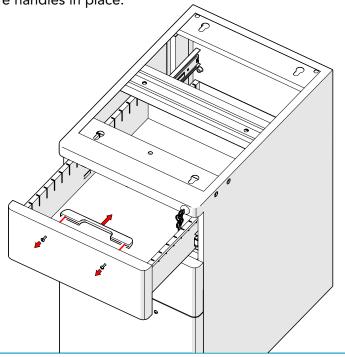

#### STEP 2


Remove shelves by first extending shelf to furthest setting until catch engages. To slide shelf off of rails, rotate visible catch levers on both sides of shelf either up or down while gently pulling shelf. Once both sides are free, the shelf can be removed.

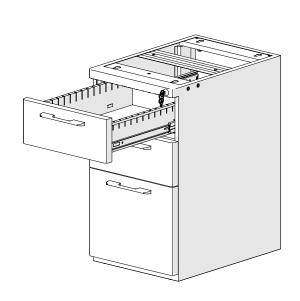

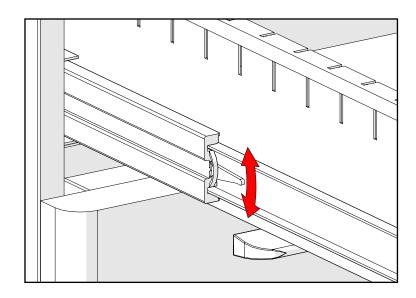




Place tops on a flat protective surface with pre-drilled holes face-up. Arrange tops in positions shown for left or right handed desk installation.

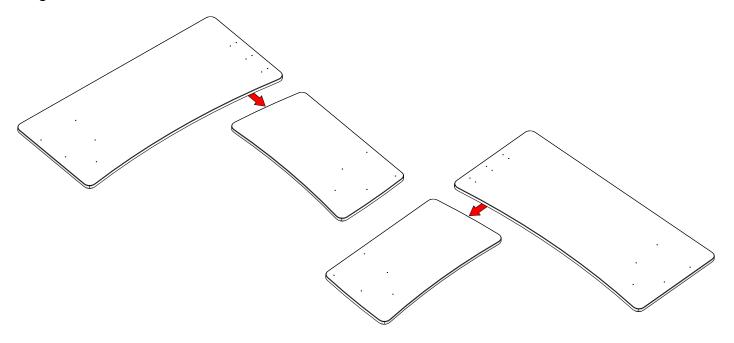


#### STEP 4

Set pedestals (with shelves removed) upside down on tops. Secure to tops with Pedestal Wood Screws (B) inserted through holes in pedestal top brackets. (Right handed desk depicted, placement will be reversed for left handed desks).

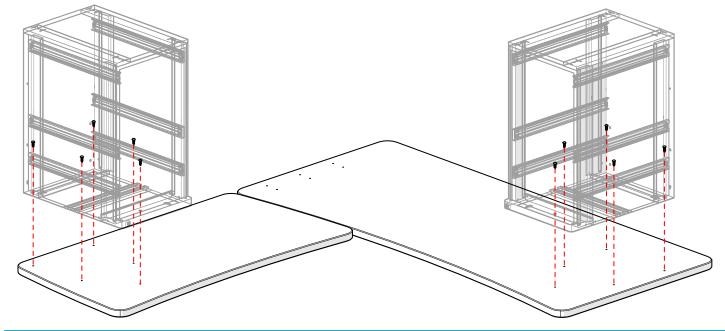




Screw in Leg Set to Large Top using Leg Wood Screws.

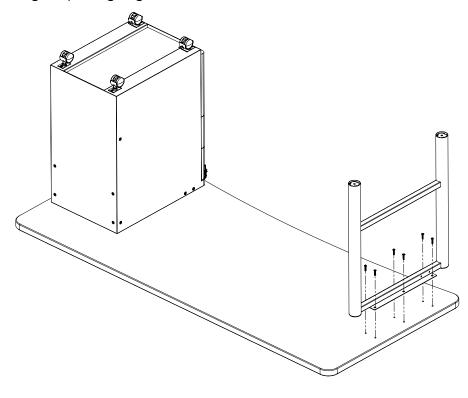


# **STEP 6**

Align Modesty Panel flush to end of Pedestal and screw to table top as shown using Panel Wood Screws.

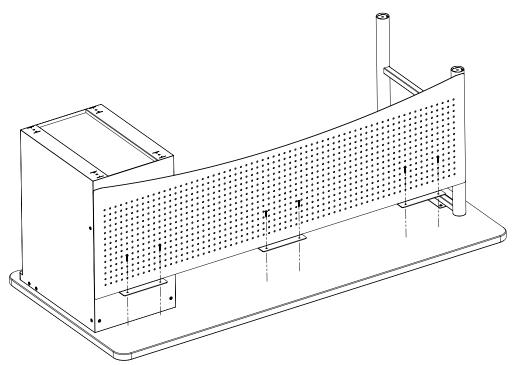




Secure Long Crossbar to Top with two (2) U-Clamps and Panel Wood Screws and attach to both the Leg Set and Pedestal with Ped Panel Screws. Then add Pedestal Casters to Pedestal with Ped Caster Screws and Leg Casters to Dual Leg assembly, making sure to include Lock Washers.

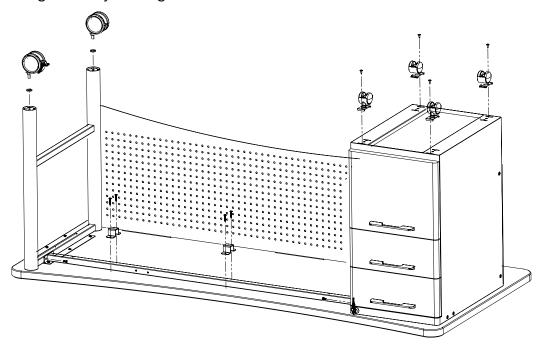


#### STEP 8

Align Modesty Panel flush to end of Pedestal and screw to table top as shown using Panel Wood Screws.

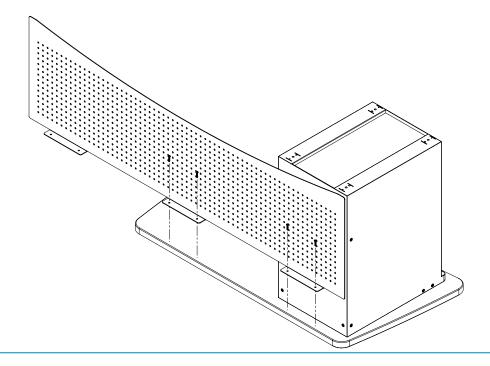




Secure Short Crossbar Top with one (1) U-Clamp and Panel Wood Screws and attach to Pedestal with Ped Panel Screws and attach Pedestal Casters with Ped Caster Screws.

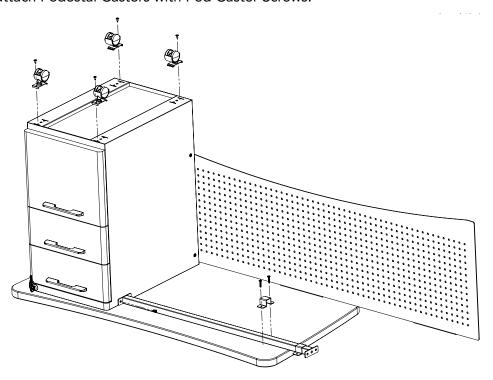


#### **STEP 10**

With two people, flip large top assembly upright. Nest, set return on its casters and push top together with large top as shown. Link together by adding two Ped Panel Screws through end of Short Crossbar and screwing into side of Long Crossbar.

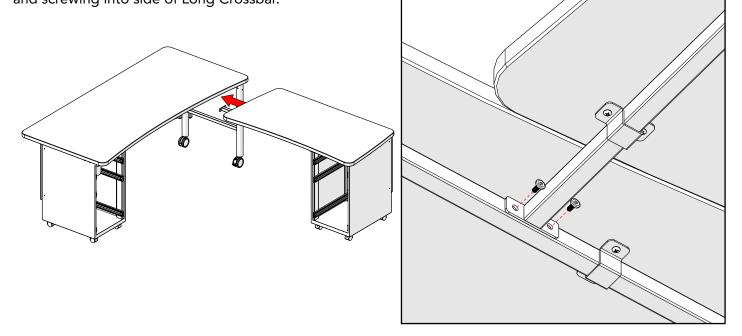




From underneath the desk add one (1) U-Clamp to Short Crossbar and screw into Large Top with Panel Wood Screws. Add Ganger across top edges, close to Modesty Panel, and secure with Wood Panel Screws.

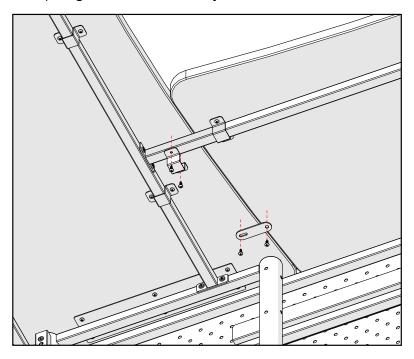


#### **STEP 12**

After ganging the desks, fasten the Modesty Panel to second desk via the two remaining holes in the Modesty Panel tab with Panel Wood Screws.

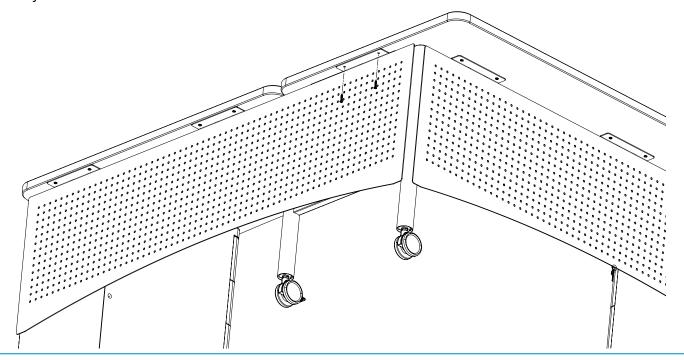




Push Plastic Caps into inserts on either side of both pedestals.

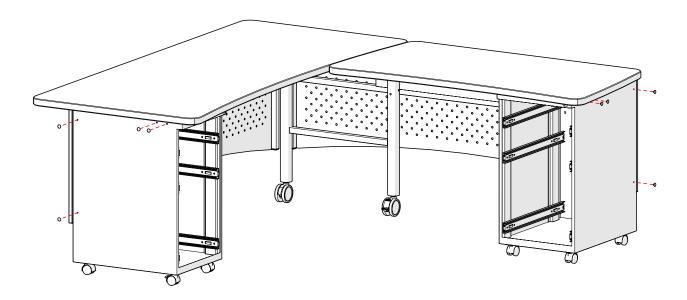

## **STEP 14**

Insert drawers back into pedestal boxes and place accessories as desired within drawers.

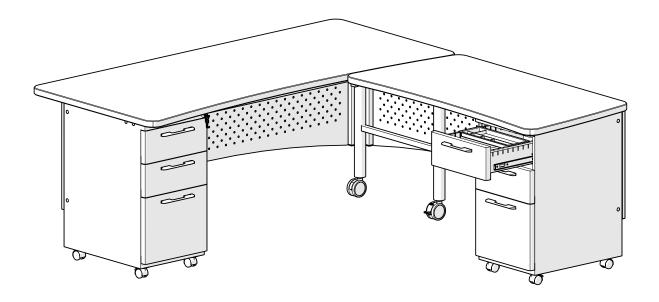



#### **DISCLAIMERS**

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

**Product Warranty:** help.schoolspecialty.com/s/article/Product-Warranties