

SNOEZELEN® SQUORNER CHAIR WITH MUSIC

Item#'s 2154077 Dark Blue, 2125259 White

INSTRUCTION MANUAL



PRODUCT DESCRIPTION	3
CONTENTS	3
SNOEZELEN® STIMULATIONS	3
BEST USE	3
COMPATIBLE SNOEZELEN® PRODUCTS	3
STARTING UP	3
SAFETY	4
TECHNICAL SPECIFICATION	4
INSTALLATION	5-6
CARE & MAINTENANCE	7

PRODUCT DESCRIPTION

The Snoezelen® Squorner Chair with Music gently envelops the user, providing a cozy and supportive embrace. Its built-in speakers deliver rich vibrations and music that penetrate deeply into the body, creating a soothing and immersive experience. The seamless integration of sound and sensation transforms the Snoezelen® Squorner Chair with Music into a multi-sensory haven, where users can feel the music resonate through their entire being.

As the music plays, the vibrations synchronize with the audio, allowing users to experience the rhythm and melody not just through their ears, but through their whole body. This unique combination of auditory and tactile stimulation enhances relaxation and promotes a sense of well-being. Whether you're unwinding after a long day or seeking a moment of tranquility, the bean bag offers a captivating escape into a world of sound and sensation.

CONTENTS

- 1 x Snoezelen Squorner Chair with Music
- 1 x 2-way speaker control

Please note: A music system is required to operate this product. Sold separately, 2120338 (Subject to change).

SNOEZELEN® STIMULATIONS

- Touch

BEST USE

Use on a flat stable surface attached to a music system in a quiet, controlled environment.

COMPATIBLE SNOEZELEN® PRODUCTS

2120338 – Mini Shelf Stereo System with Bluetooth

STARTING UP

Unpack carefully, do not use a knife to avoid accidentally cutting the Squorner. Connect to a music system. Enjoy.

SAFETY

ALWAYS SUPERVISE THE USE OF THIS PRODUCT



Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.

This product contains a foam or bead filling. The beads in the bead filling are small parts and should always remain out of reach. Where a SNOEZELEN® product containing beads and has a zipper, this zipper is intentionally located out of sight (e.g. on the underside) to discourage access to it. The zipper is also secured with stitching and where possible, hidden by a fabric flap. Regularly check that the zip is not easily accessible. **Do not attempt to access the interior part of this product. Never allow children or vulnerable people to access the interior part of this product.**

Should any seams or zipper become damaged, contact School Specialty immediately to arrange repair or replacement. Should the product require re-filling, contact School Specialty immediately to discuss this. **Keep away from sources of heat and fire.**

TECHNICAL SPECIFICATION

Size: 35½" H x 31½" x 31½" (90H x 80L x 80cmW)

Material: Polyester

Speakers require a music system with:

Impedance: 6-8 OHMS

Maximum Power: 40 Watts RMS


Nominal Power: 10-20 Watts RMS

INSTALLATION


1. Unpack the Musical Squorner carefully, avoid using a knife or sharp object. Either store the packaging in a safe place, out of reach of clients if you need the packaging for storage, or dispose of it appropriately.
2. Place the Musical Squorner indoors, on a flat, stable surface. It is possible that some of the filling may have displaced slightly during transit. With use this will even out again, but you may wish to gently manipulate the cushion to make sure the filling covers the enclosed box.
3. A 2-way speaker control is provided to allow selection of sound and vibrations either through the internal Squorner speakers or external speakers, or both at the same time. For multiple connections up to four, 2121723 can be purchased separately. Insert the two wires from the internal speakers into SPEAKER #1 OUT on the 2-way switch.
4. Insert wires from the external speakers into SPEAKER #2 OUT on the 2-way switch.
5. Insert wires from music system into SPEAKER INPUT on the 2-way switch.
6. Plug in music system.
7. Select the required operation (tape/CD/radio/Bluetooth) and adjust volume to the required level.
8. SWITCH 1 on the 2-way switch operates the internal speakers in the Squorner. SWITCH 2 on the 2-way switch operates the external speakers. Any variation may be selected. NOTE: A high bass setting produces more vibration.

PLEASE NOTE

Many Music Systems have different speaker connections. Please refer to the diagrams below in case you have a newer model of music system. Older models of music systems tended to have small sockets with a round hole in them that were covered by a small pushable cover (often red and black):

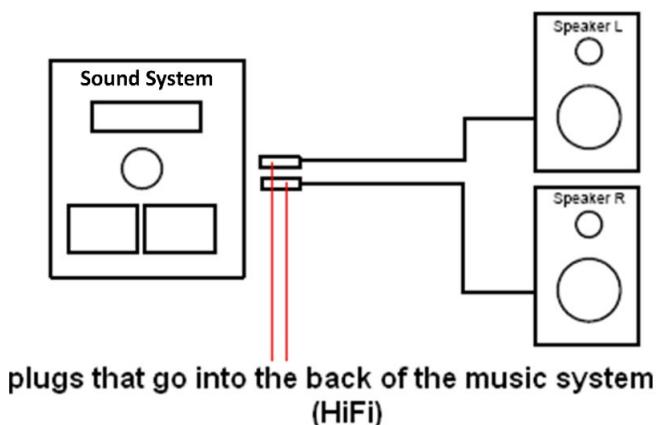

Please refer to the revised image below to show the connection of SNOEZELEN® products to newer models of music systems:

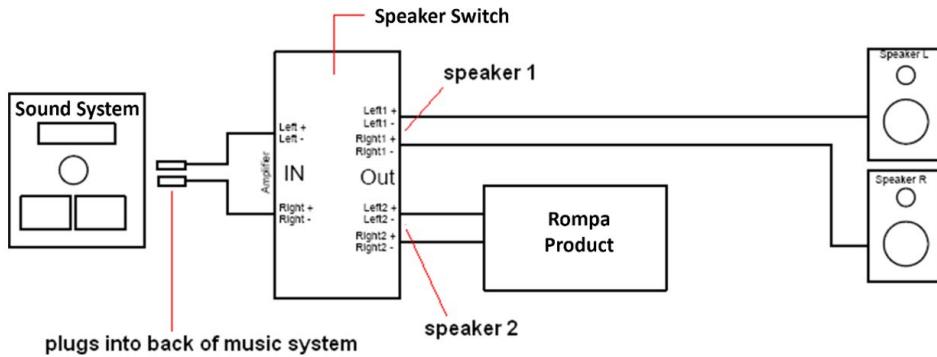

If required, i.e. depending on your music system, it may be necessary to follow the steps outlined below:

1. Cut the speaker cables approximately in the middle, approxiamtly 12" (30cm) from the stereo connectors.
2. Strip the ends of the wires attached to the connectors and connect them to the 'IN' of the SNOEZELEN® 2-way speaker controller (splitter box).
3. Strip the ends of the wires attached to the speakers and connect to the 'OUT' of the SNOEZELEN® 2-way speaker controller (splitter box), Channel 1.
4. Connect the SNOEZELEN® product (i.e. Musical Squorner) to 'OUT' of the SNOEZELEN® 2-way speaker controller (splitter box), Channel 2.
5. Use the switch on the SNOEZELEN® 2-way speaker control (splitter box) to direct the sound to either: Speakers, SNOEZELEN® product (i.e. Musical Squorner), or both.

CARE & MAINTENANCE

- Always supervise the use of this product.
- Organize a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zippers, or sharp/hard/pointed objects from coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift the cushion or move furniture to clean all surfaces and the floor underneath.
- Furniture and cushioning are intended to provide comfort and relaxation. Avoid eating and drinking while using these products.
- If the material for your furniture can be steam cleaned, please exercise great caution for the simple reason that when creating furniture, seams and stitching are necessary which create tiny holes where it is possible for liquid to get through into the inner foam. Should a lot of steam/water be accidentally used, there is potential for the inner foam to get saturated and be detrimental to your furniture.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.
- Some of our products contain zippers for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

Polyester

- Use a soft brush to remove loose dust/dirt
- Clean with a mild detergent (such as upholstery cleaner, soap and water) applied to a sponge or damp cloth. Do not use an abrasive cleaning pad.