


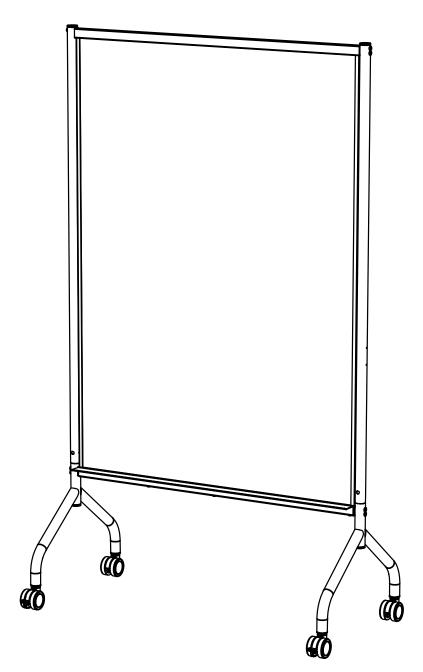

# Classroom Select<sup>®</sup> Mobile Double Sided Markerboard

### ASSEMBLY INSTRUCTIONS


Thank you for purchasing the Classroom Select<sup>®</sup> Mobile Double Sided Markerboard from School Specialty<sup>®</sup>. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.








# PART AND TOOL LIST

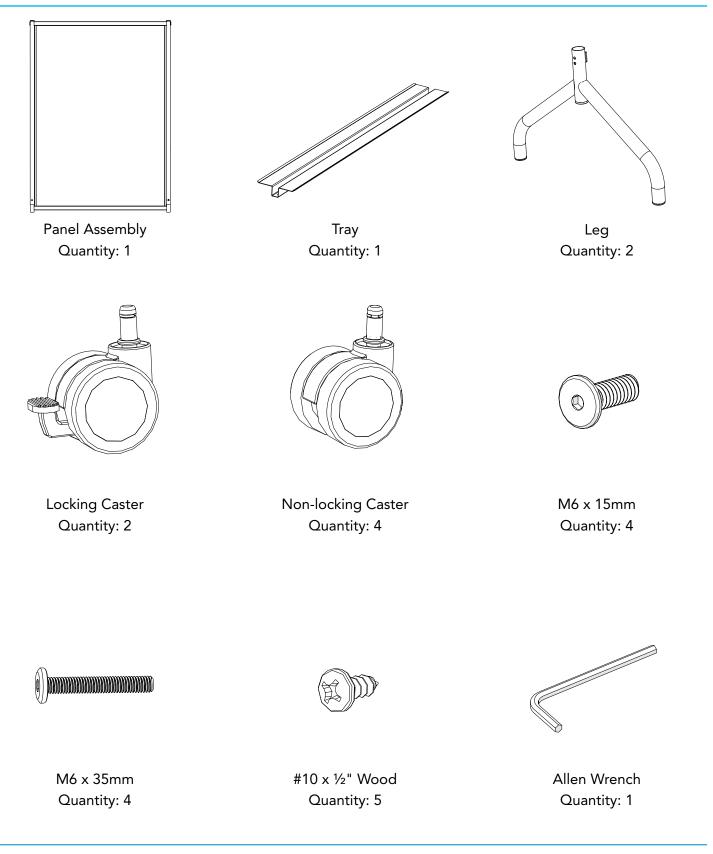




### **STEP 1**

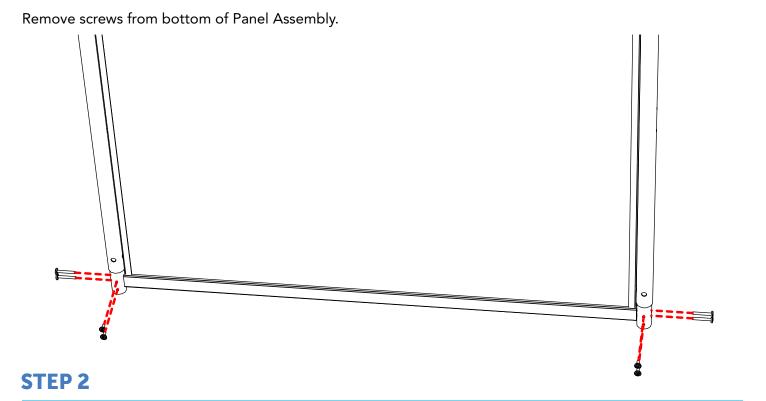


Fit Legs onto Panel Assembly. Rotate Legs to line up with holes in Panel Assembly upright tubes. Replace all screws removed in Step 1 to secure Legs.

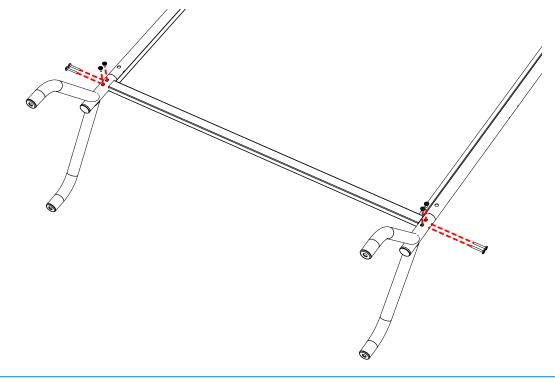




# **STEP 3**

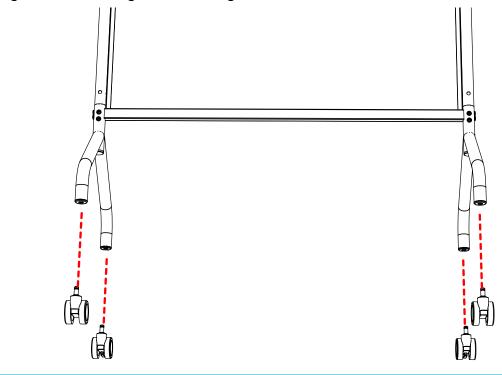

Screw in Locking and Non-Locking Casters to Legs.

#### **STEP 4**

Align Tray on the bottom of the marker board. Secure tray to the markerboard trim using #10 x ½" wood screws.

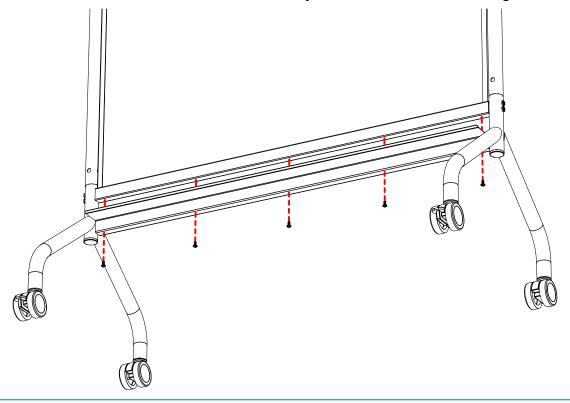



# DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties