




Classroom Select[®] Tilt-N-Nest Cafeteria Table

ASSEMBLY INSTRUCTIONS

Thank you for purchasing the Classroom Select[®] Tilt-N-Nest Cafeteria Table from School Specialty[®]. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

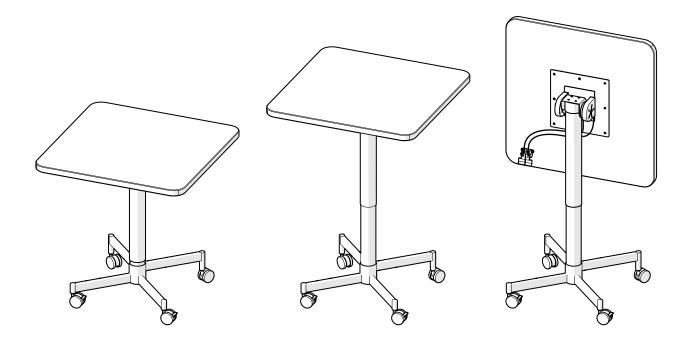




PART AND TOOL LIST




Table Top

Quantity: 1

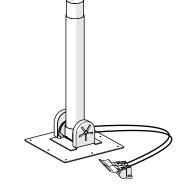

Pedestal Assembly Quantity: 1




Pedestal Base Quantity: 1



Locking Caster Quantity: 2



Non-Locking Caster Quantity: 2



#10 x 1" Wood Screw Quantity: 10








Cable Clip Screw Quantity: 2

M6 x 16mm Allen Screw Quantity: 3 Cable Retainer Clip Quantity: 2



PART AND TOOL LIST

.




Allen Wrench Quantity: 1

Caster Wrench Quantity: 1




STEP 1

Place the top upside down on a stable, non-abrasive soft surface to avoid any scratching. Attach Pedestal Assembly to underside of table top with eight (8) wood screws using predrilled holes as a guide for placement. Be sure that predrilled handle holes are located as shown before screwing in pedestal.

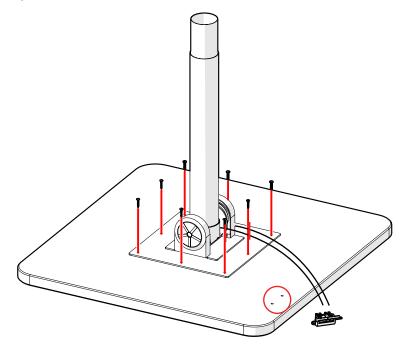

STEP 2

Mount handle to table with two wood screws using predrilled holes. Be careful not to twist cables while mounting.

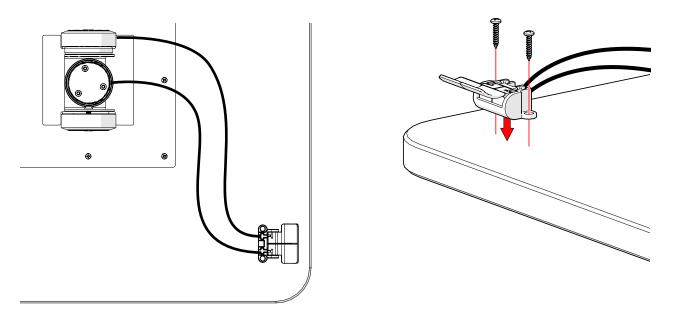





STEP 3

STEP 4

Wrap a Cable Retainer Clip around each cable and then position clips near the bend. Mount clips to table with a single M4 x 12mm wood screw for each and tighten until cables are held snugly in place.

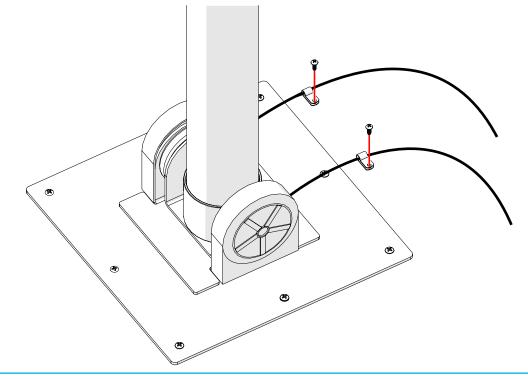


Slide Pedestal Base over inside tube of Pedestal Assembly. Rotate base until three outside holes line up with holes in inside tube mounting plate. Base legs should point to each table top corner for added stability.

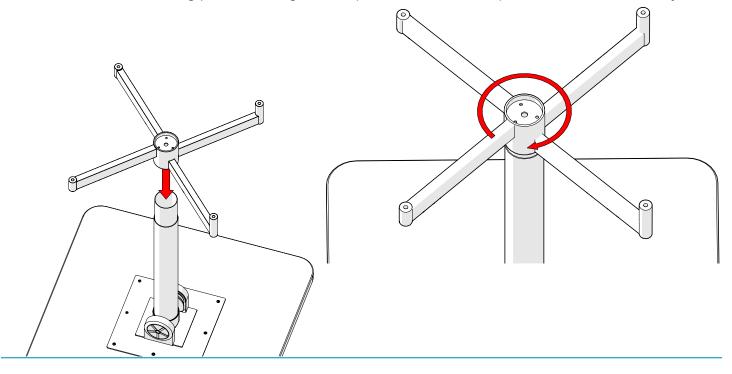




STEP 3

Insert three M6 x 15mm screws into base holes to fasten base to Pedestal Assembly and tighten with Allen Wrench.

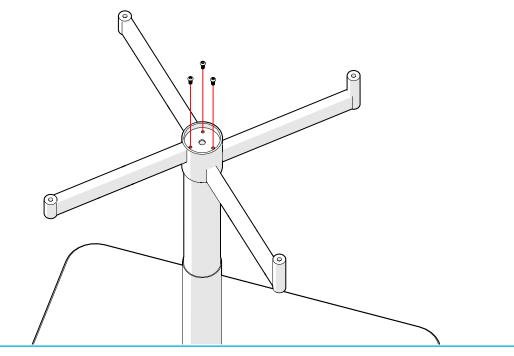

STEP 4

Screw in casters to feet of base. The two Locking Casters should be installed on the same side for convenience. Hand screw casters most of the way then tighten with Caster Wrench.

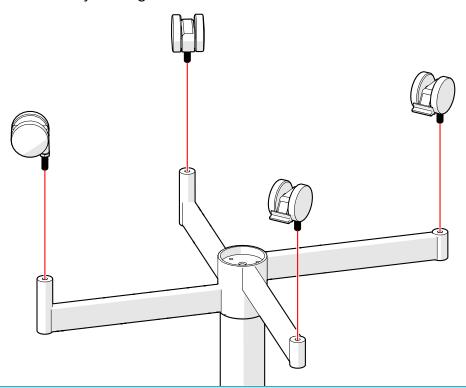



DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties