



Classroom Select® Advocate Series® Makerspace Professional Project Table

ASSEMBLY INSTRUCTIONS


Thank you for purchasing the Classroom Select® Advocate Series® Makerspace Professional Project Table from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

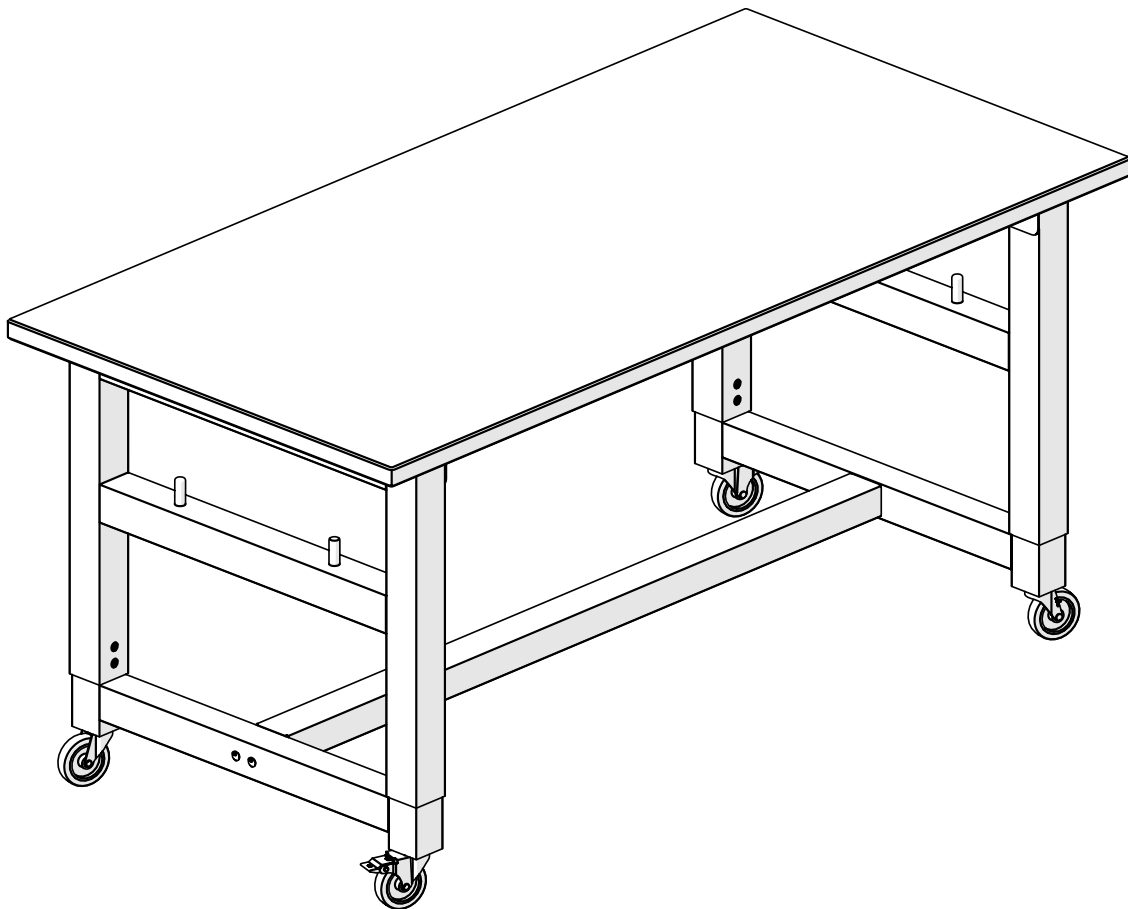


PART AND TOOL LIST

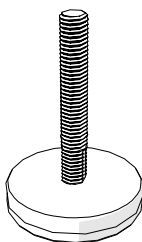


Glide
Quantity: 4
(Glide Version Only)

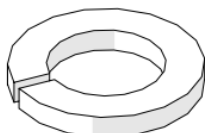


Lock Washer
Quantity: 4
(Caster Version Only)

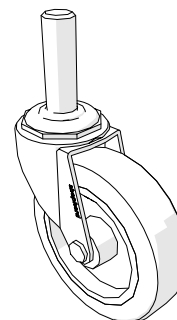


Caster
Quantity: 2
(Caster Version Only)

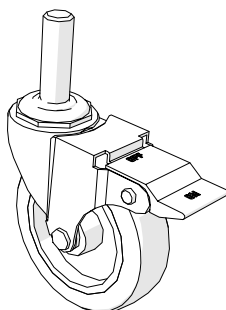

Locking Caster
Quantity: 2
(Caster Version Only)

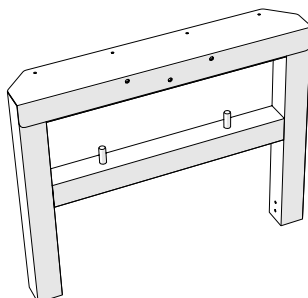

Leg Receiver
Quantity: 2



Lower Leg
Quantity: 4



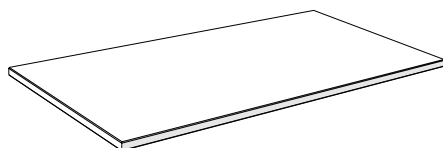


Table Top
Quantity: 1

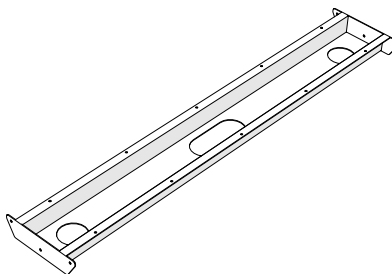


Cable Trough
Quantity: 1




Leg Joiner
Quantity: 2


PART AND TOOL LIST

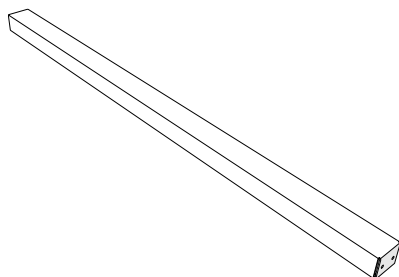


Footrest
Quantity: 1

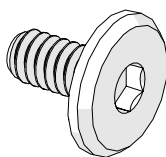


M6 Bolt
Quantity: 16

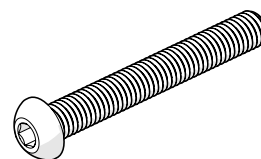


Allen Head Bolt
Quantity: 10



Wood Screw
Quantity: 18




Caster Wrench
Quantity: 1

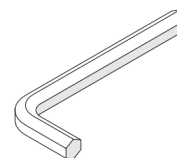

Allen Wrench
Quantity: 2


STEP 1

Place Table Top upside-down, on a non-scratch surface, so that the bottom of Table Top is facing upwards.

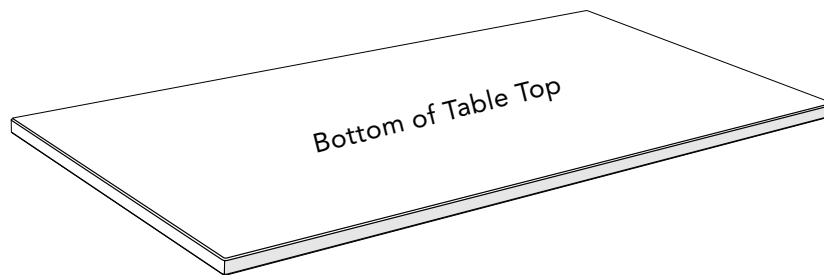


STEP 2

Attach Leg Receiver to Cable Trough using 3 Allen Head Bolts. Repeat this step for the other side.

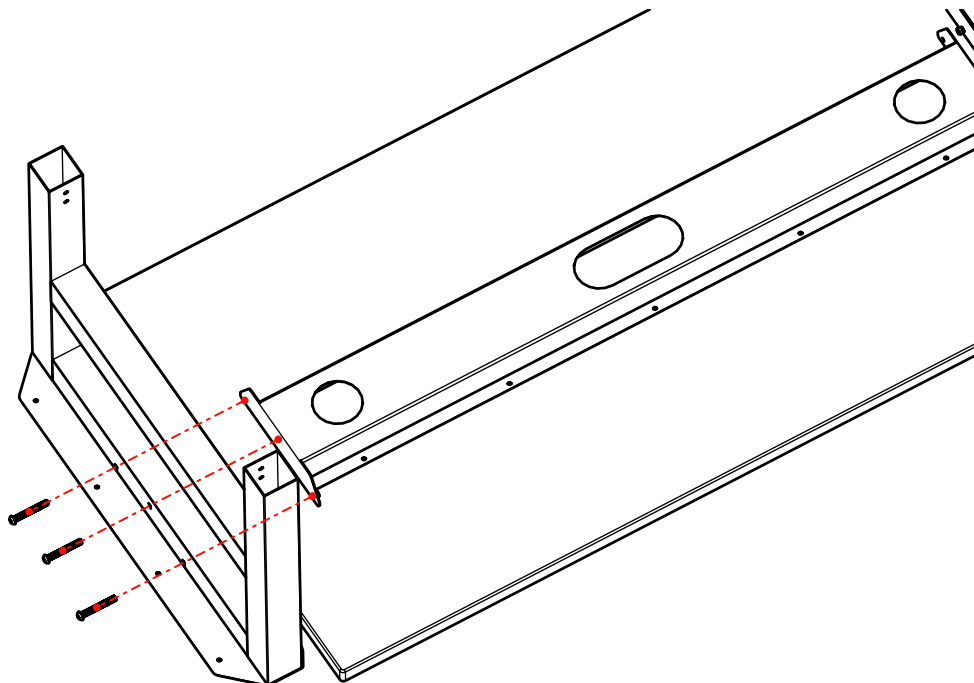


STEP 3

Attach Lower Legs to Leg Joiner with M6 Bolts using the provided Allen Wrench. Repeat this step for the other side.

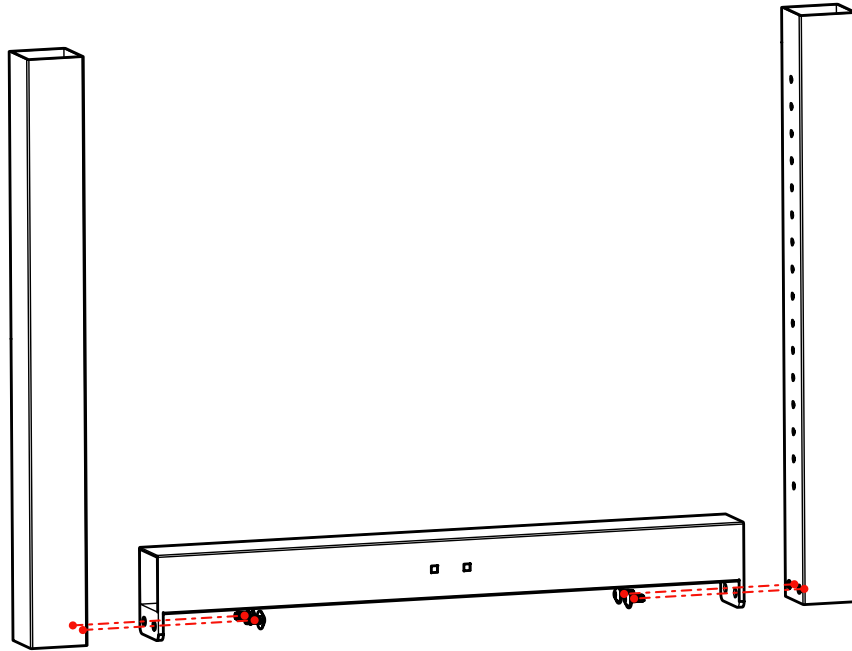


STEP 4

Add the Lower Legs to each Leg Receiver. Set at desired height and secure in place with M6 Bolts using the provided Allen Wrench. Repeat this step for the other side.

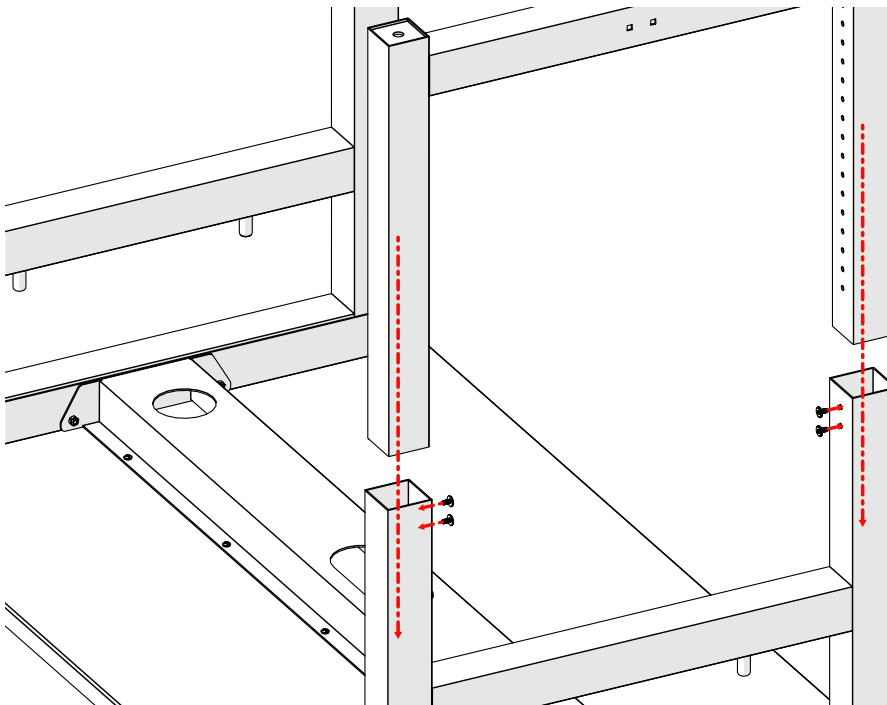


STEP 5

Attach the Footrest to the Leg Insert using 2 Allen Head Bolts. Be sure to align the Footrest so that the open side is facing away from the table top as shown. Repeat this step for the other side.

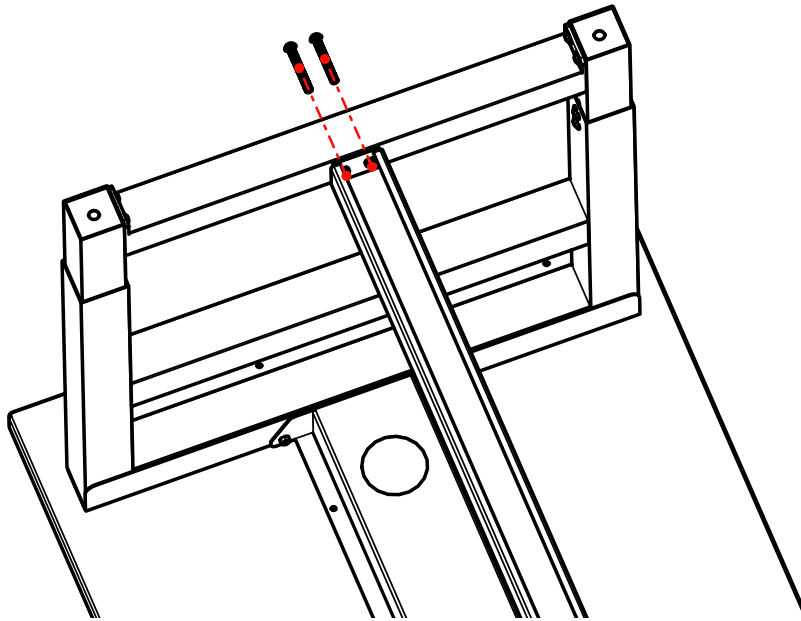

STEP 6


Attach the base onto the Table Top using 18 Wood Screws as shown.

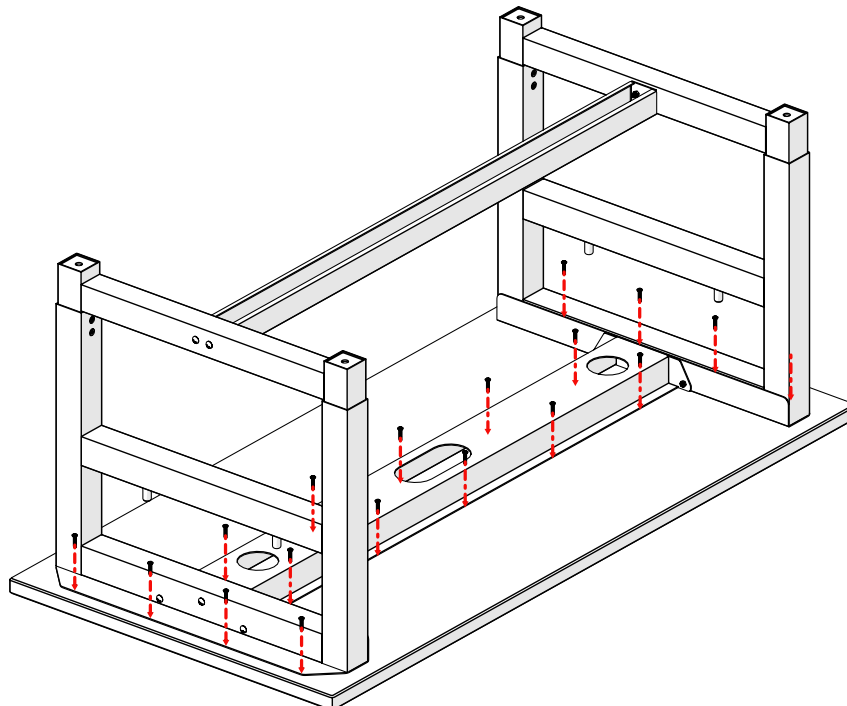

STEP 7

Glide Version: Screw threaded Glides into Leg Inserts.

Caster Version: Attach 2 locking and 2 non-locking Casters to the Leg Inserts as shown including a Lock Washer with each Caster using the provided Caster Wrench.

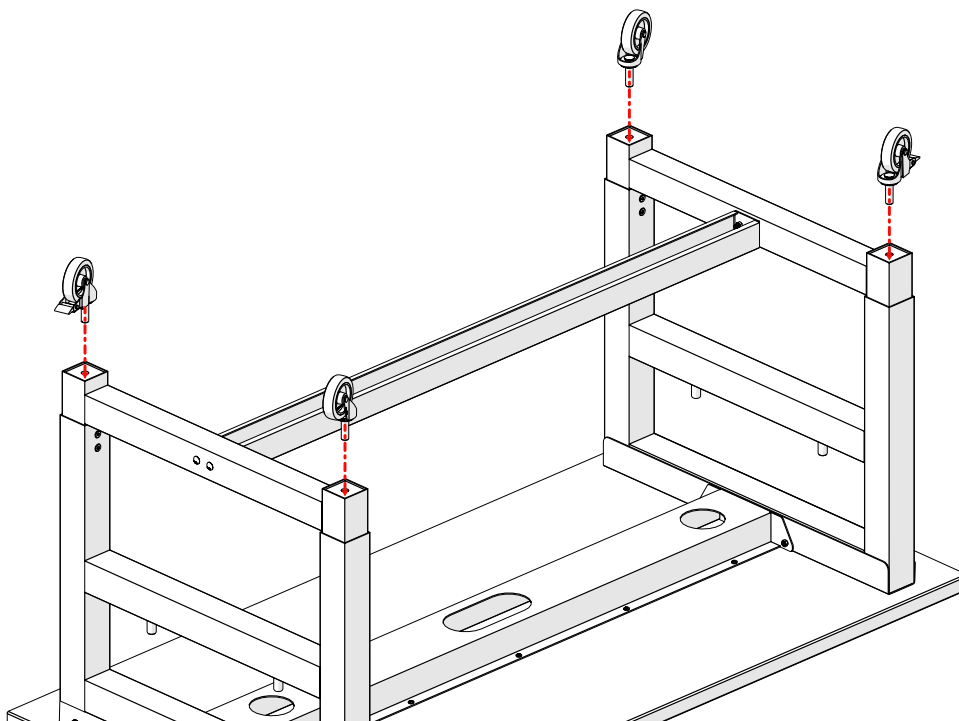

DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties