


Classroom Select® Cafeteria Tables with Stools

ASSEMBLY INSTRUCTIONS


Thank you for purchasing Classroom Select® Cafeteria Tables with Stools from School Specialty®. Please review the enclosed packing list to ensure all components are included and read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customer care.schoolspecialty.com/contact-us-email.




PART AND TOOLS LIST

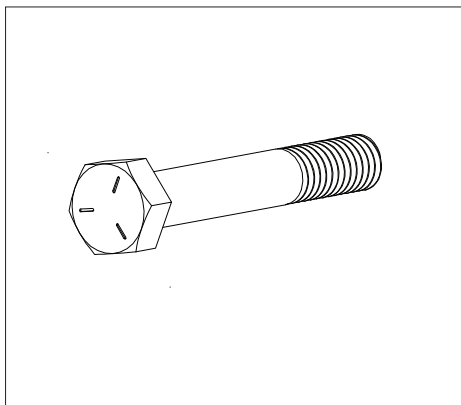


Bolt
Quantity: 12

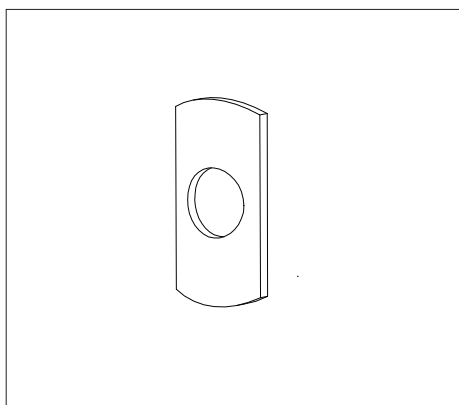


Washer
Quantity: 24

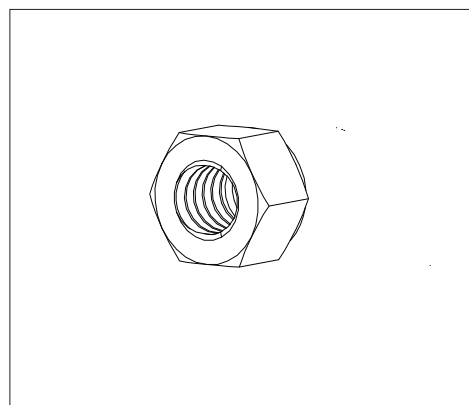


Nut
Quantity: 12

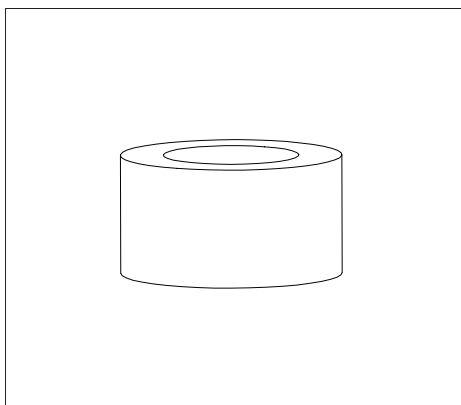

Spacer
Quantity: 12

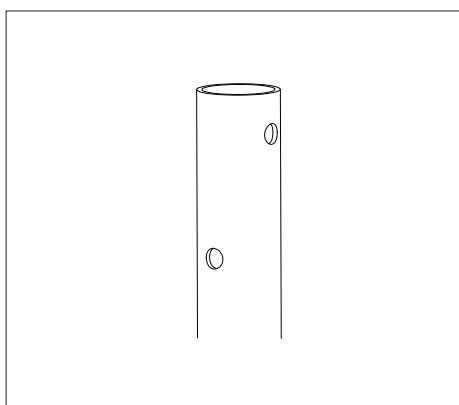

Leg Upright
Quantity: 12

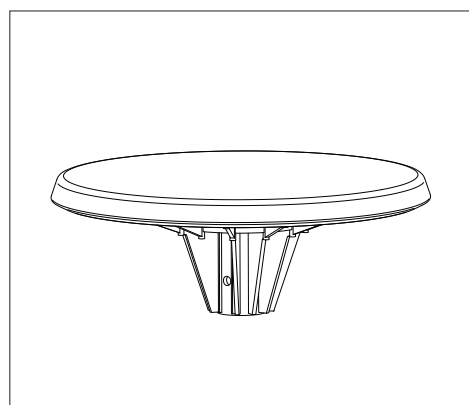


Stool
Quantity: 12

STEP 1


Inspect the stools for any shipping damage to the top or support ribs underneath. Make sure the hardware is with the stools.

FIGURE 1

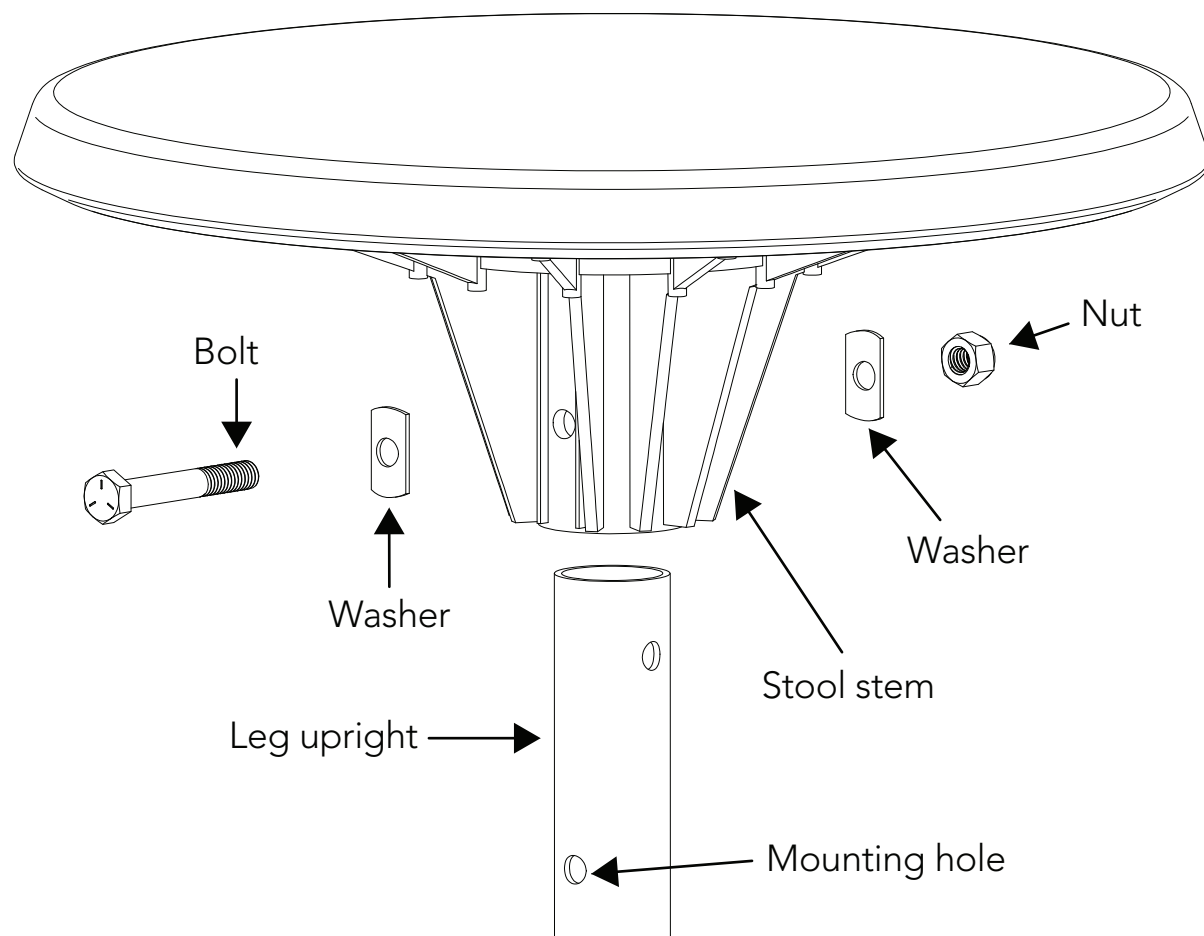

STEP 2

- 1. INSTALL STOOLS ONTO CENTER / MIDDLE LEGS FIRST** Slide stool stem onto tube until the holes in the stool line up with the leg upright. Occasionally you may need to spin the stool on. Very rarely, grease may be needed if the stool is tight when installing.
- 2. INSTALL STOOLS ONTO END LEGS SECOND:** Some tables will require table to be opened to the 2/3rd's position to install stool. Fold table back to the locked storage position to install hardware. Repeat STEP #1. ** ELLIPTICAL, ROUND & COMBO TABLES: Install stool spacers in stool stem before putting stool onto tube. (See FIGURE 2)
- 3. INSTALL BOLT INTO STOOL STEM AND TUBE.** Slide one flange washer onto bolt through stool, both sides of tube, and through the opposite side of stool. (Install bolts so heads face out when the table is folded). Once the bolt is through the other side, install the second flange washer aligned to the stool stem.
- 4. HAND TIGHTEN** the lock nut to the bolt.
- 5. Ensure the flange** washers are lined up in the molded groove in the stool stem before tightening completely.
- 6. FASTEST WAY -USE TOOLS TO TIGHTEN** bolt/nut with (1) wrench & drill. Tighten with (2) wrenches until stool no longer rotate/wiggles. It's OK to tighten down very hard.

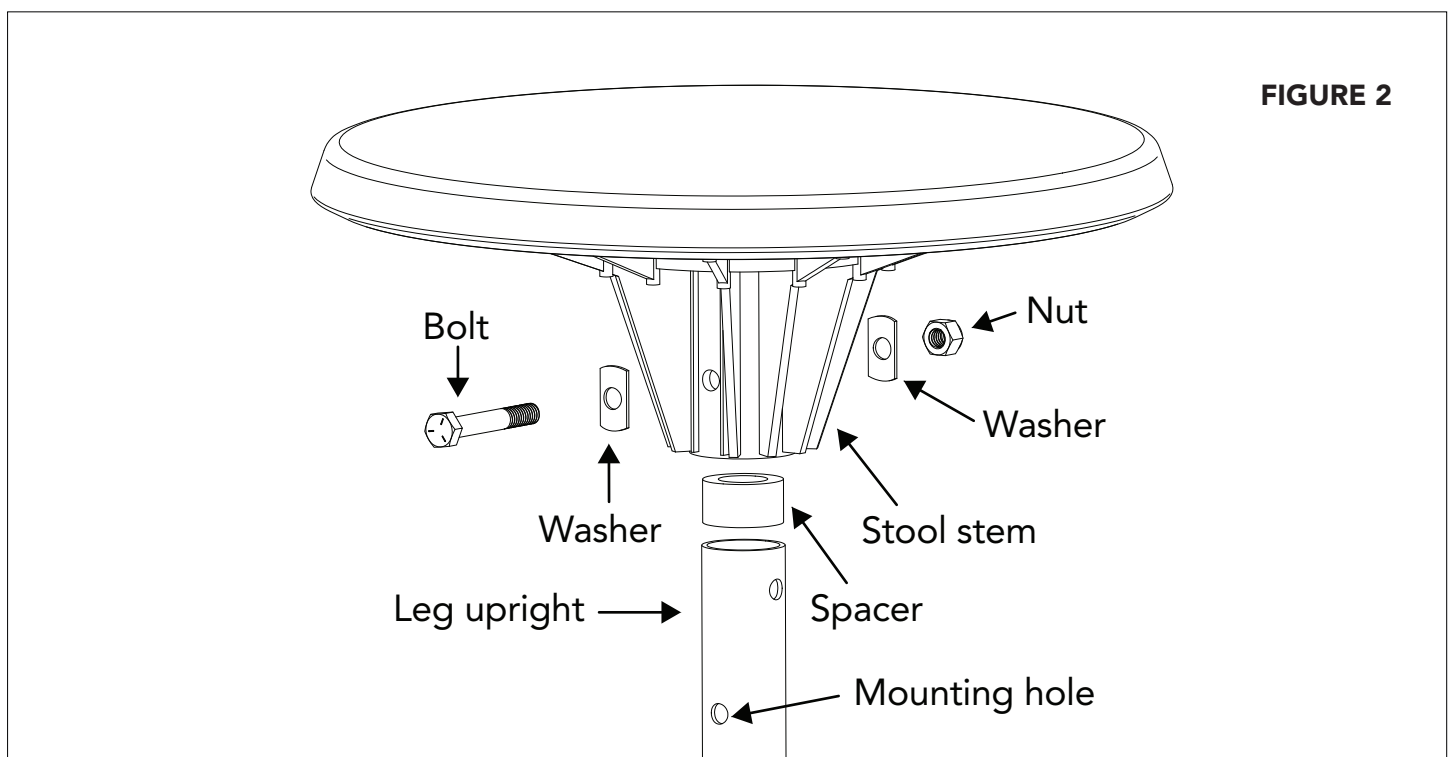

STEP 3

1. INSPECT TALL STOOLS AND TEST TABLE:

Check that all stools hardware are installed properly.

2. Be sure the bolt/nut is installed tight so the stools do not rotate when holding and turning like a steering wheel.
3. Open/close the table to be sure it operated properly.

FIGURE 3 (Folded Shown)

1. Install middle and center stools first. Install bolts so the head faces out when the table is folded.
2. Open table slightly to slide stools onto end leg uprights. Fold back to locked storage position to install hardware.



FIGURE 3

DISCLAIMERS

Please review the enclosed packing list to ensure all components are included. Please read the instructions carefully before you begin assembly. If you find anything missing or have any questions now or after set-up, please contact Customer Care at 888.388.3224 or customercare.schoolspecialty.com/contact-us-email.

Heavy or large furniture may require two or more people for proper assembly. Improper assembly may void the warranty. Ensure all hardware is correctly installed and screws are fully tightened before use. Recheck and tighten screws at least once per year. Failure to assemble or secure parts properly may result in product failure or personal injury.

The products illustrated/photographed in this assembly instruction may vary slightly from the actual product.

Product Warranty: help.schoolspecialty.com/s/article/Product-Warranties